


Update subscription code in PocketMax4 terminal


1

Connect the Receiver to your PC through Pocketmax on the correct Port and Baud Rate your device is set up on

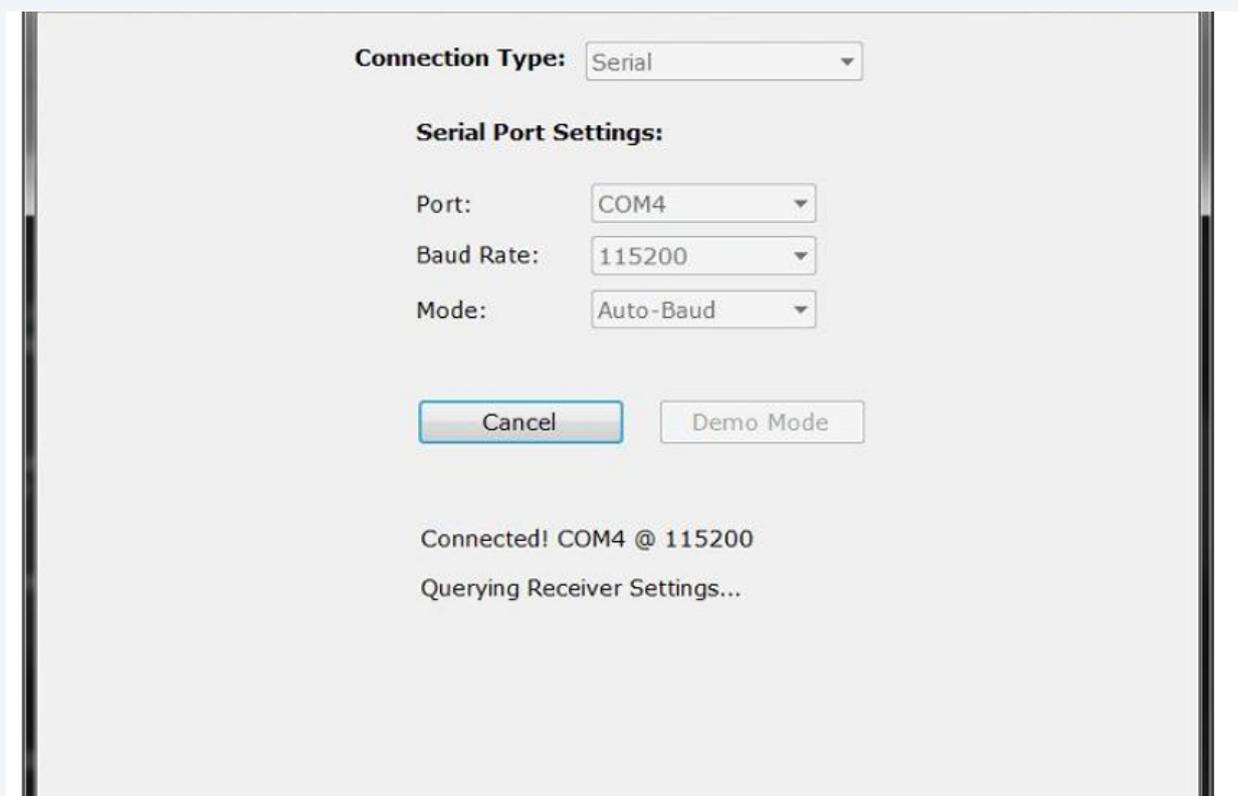


The screenshot shows a software interface for configuring a serial connection. At the top, there is a dropdown menu for 'Connection Type' set to 'Serial'. Below this is a section titled 'Serial Port Settings' containing three dropdown menus: 'Port' set to 'COM4', 'Baud Rate' set to '115200', and 'Mode' set to 'Auto-Baud'. At the bottom of the settings section are two buttons: 'Cancel' and 'Demo Mode'. Below the buttons, the status text reads 'Connected! COM4 @ 115200' followed by 'Querying Receiver Settings...'.


2 Click "PocketMax4" when connecting

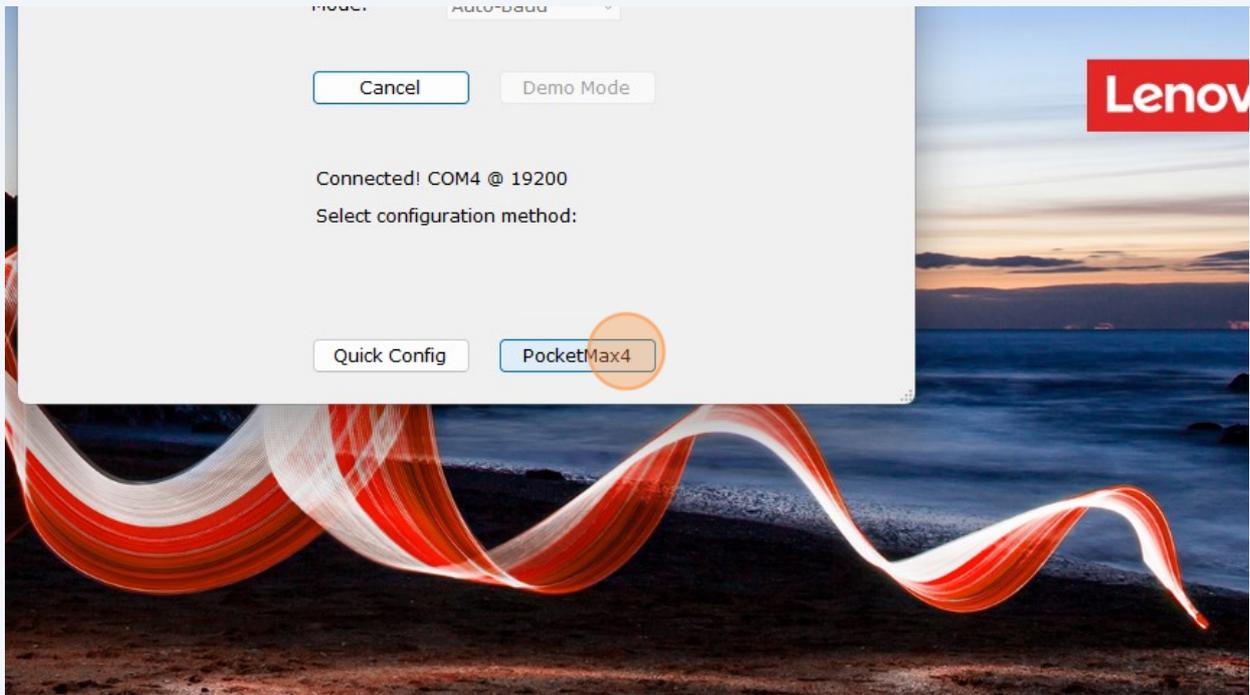


3 Click "Terminal"

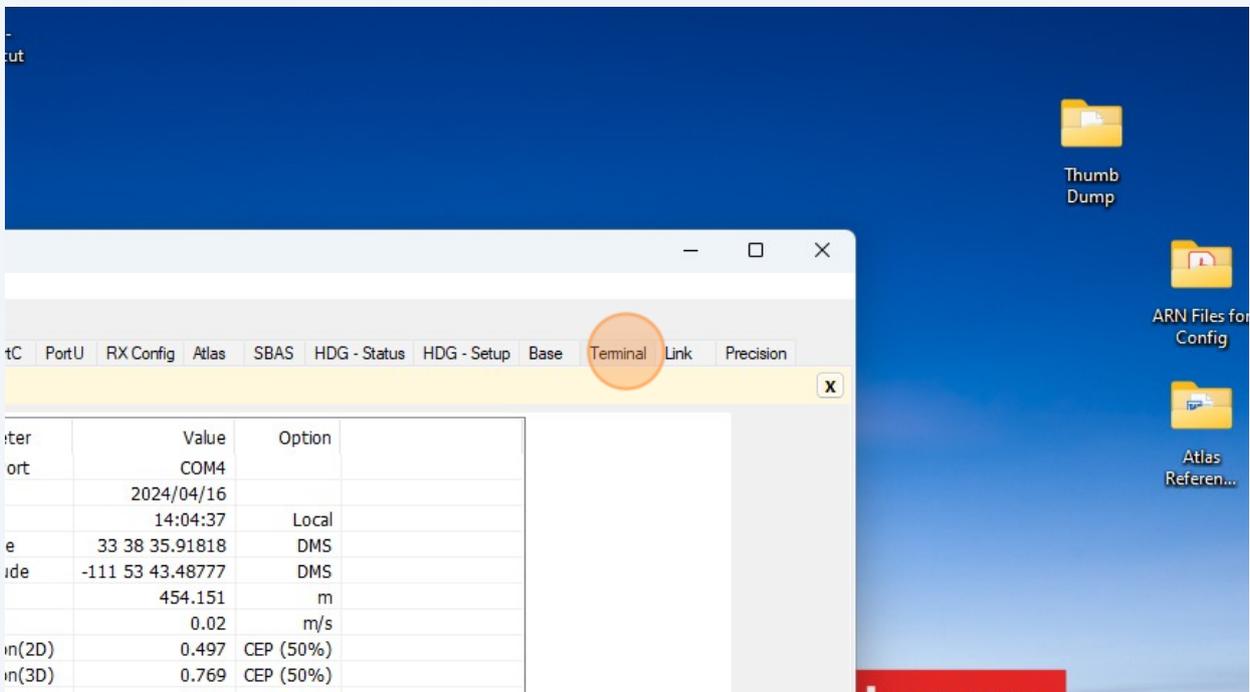


4 Click here

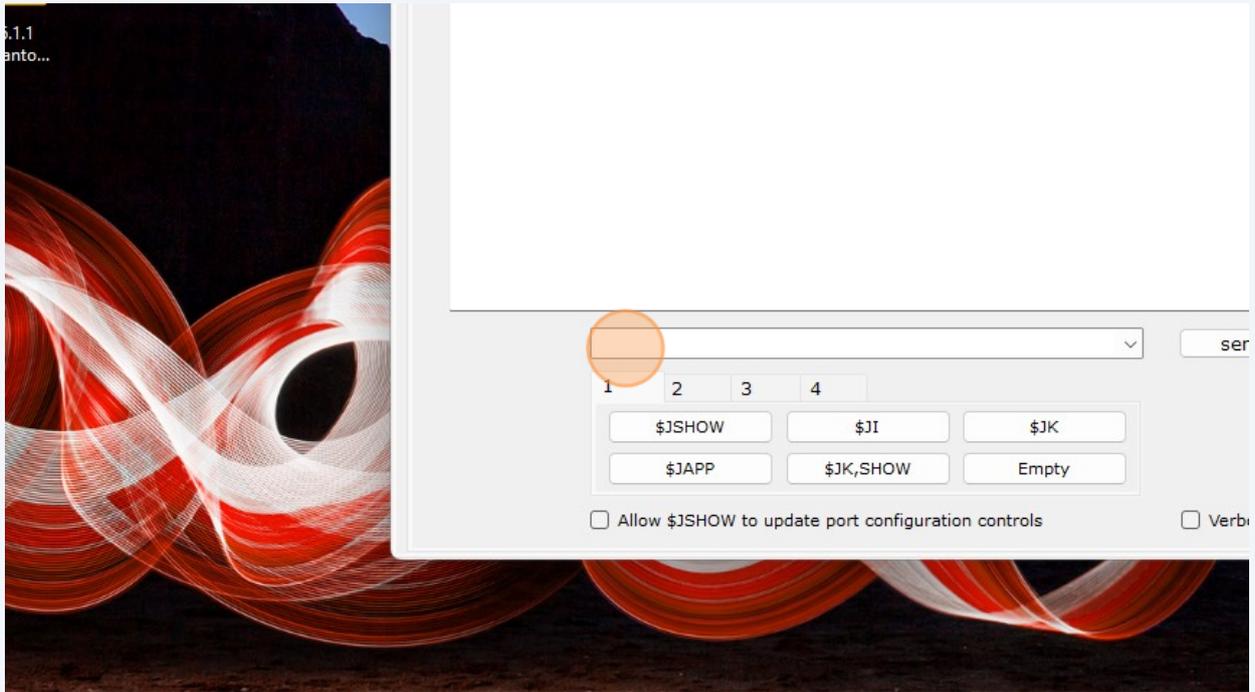


5 Paste the Activation or Subscription code in this terminal line, including the "\$JK," before the code.

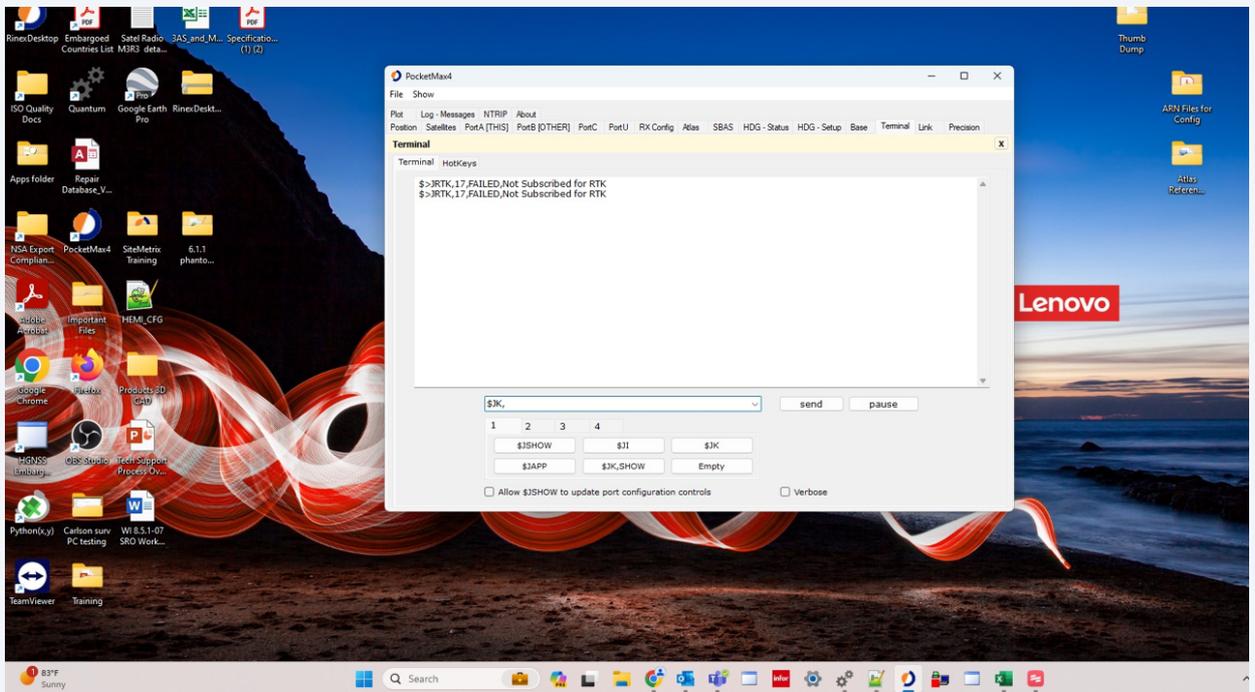

6 Click "send"

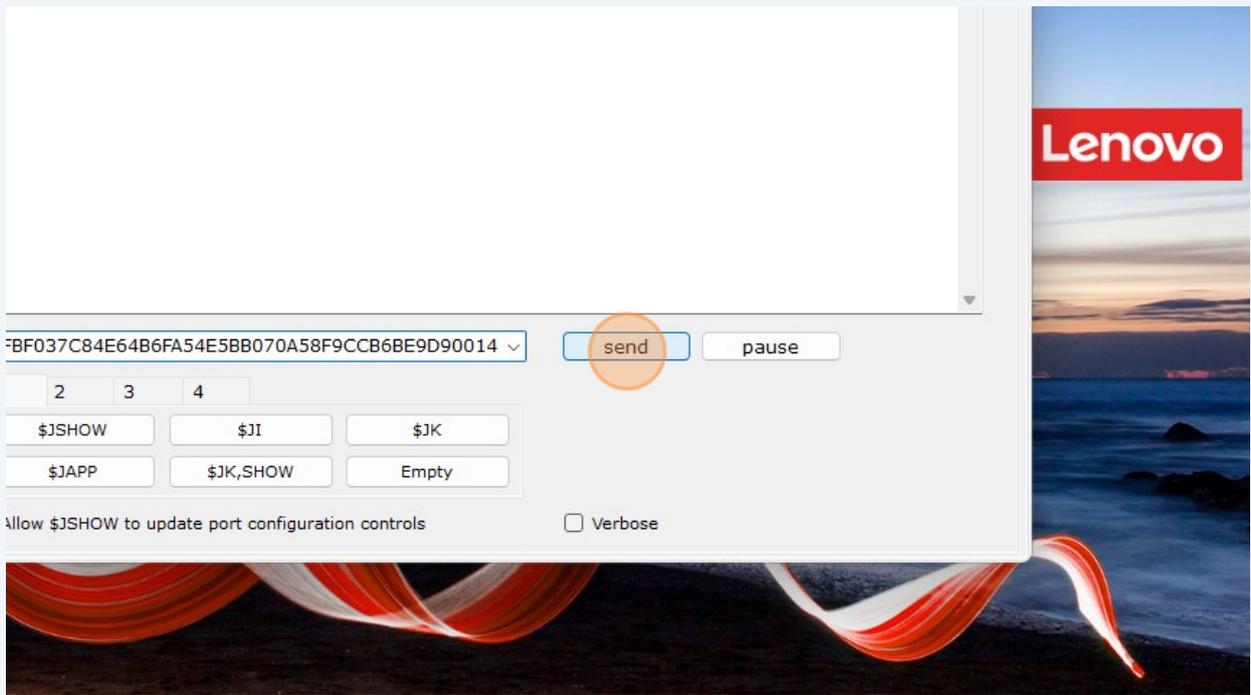


7 Click "\$>JRTK,17,FAILED,Not Subscribed for RTK
\$>JRTK,17,FAILED,Not Subscribed for RTK
\$>JRTK,17,FAILED,Not Subscribed for RTK
\$>JRTK,17,FAILED,Base..."

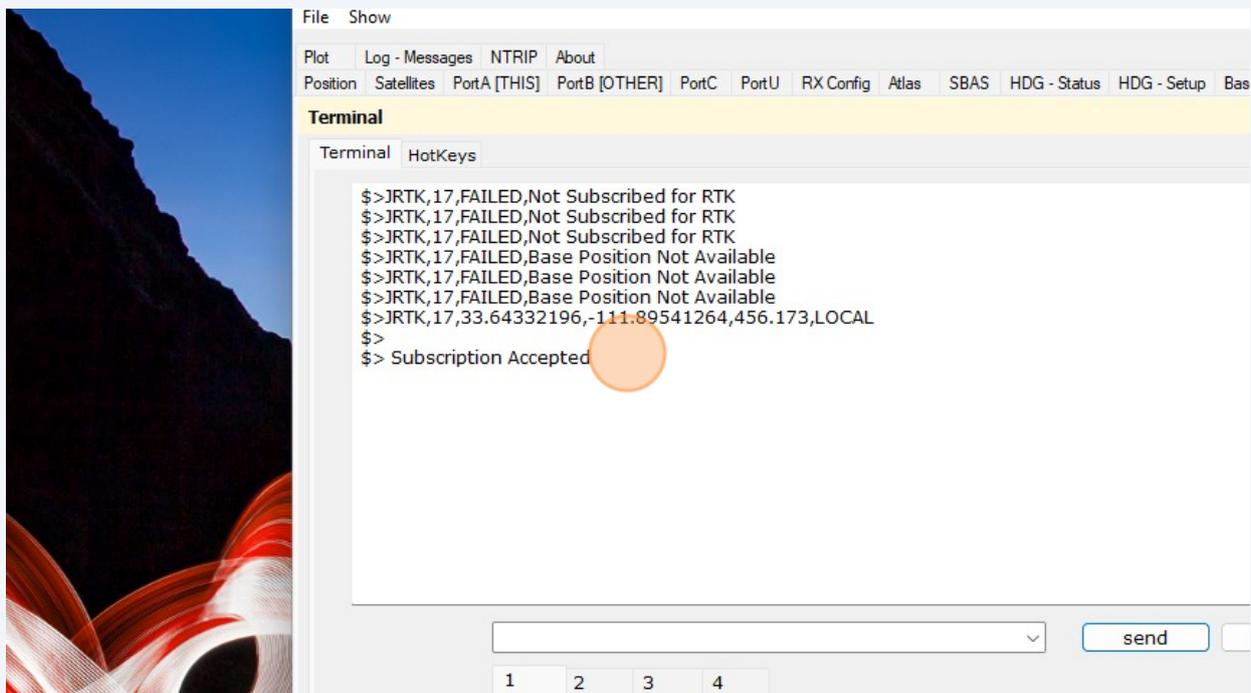


8

If applied correctly, the receiver will respond "subscription accepted" Note - This may take more than one attempt.

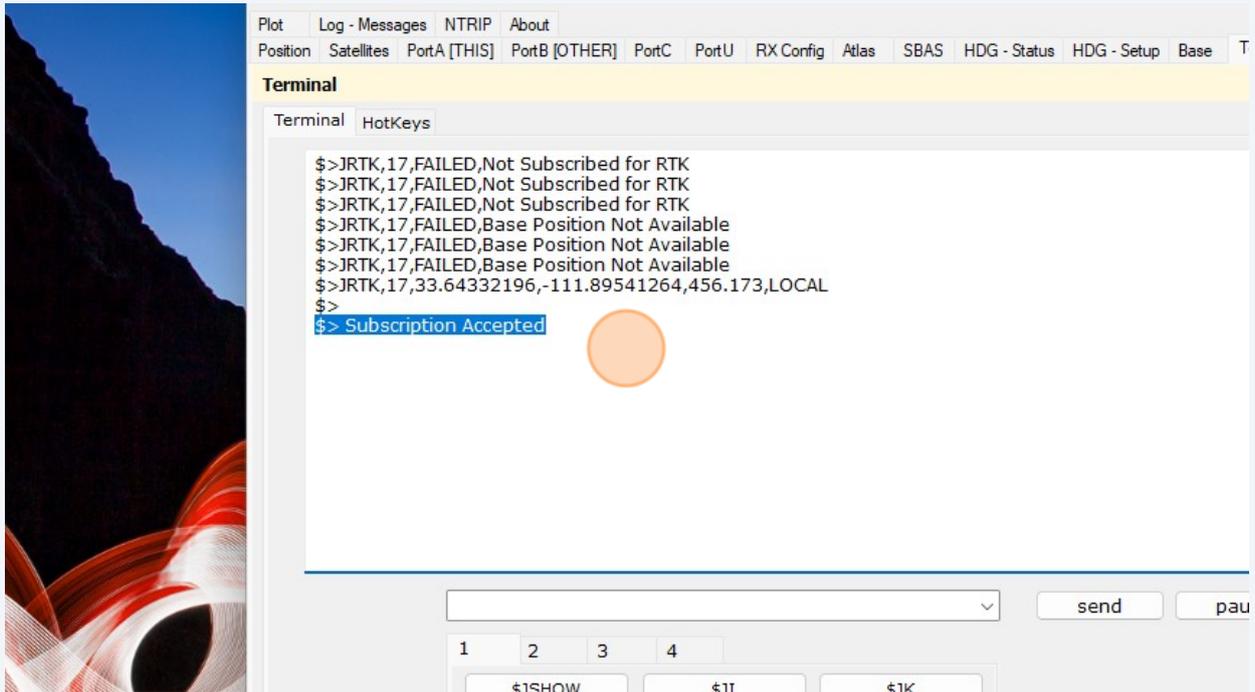


9


The Alternate method for users on Pocketmax 4.0.2 can be done from the "about" tab

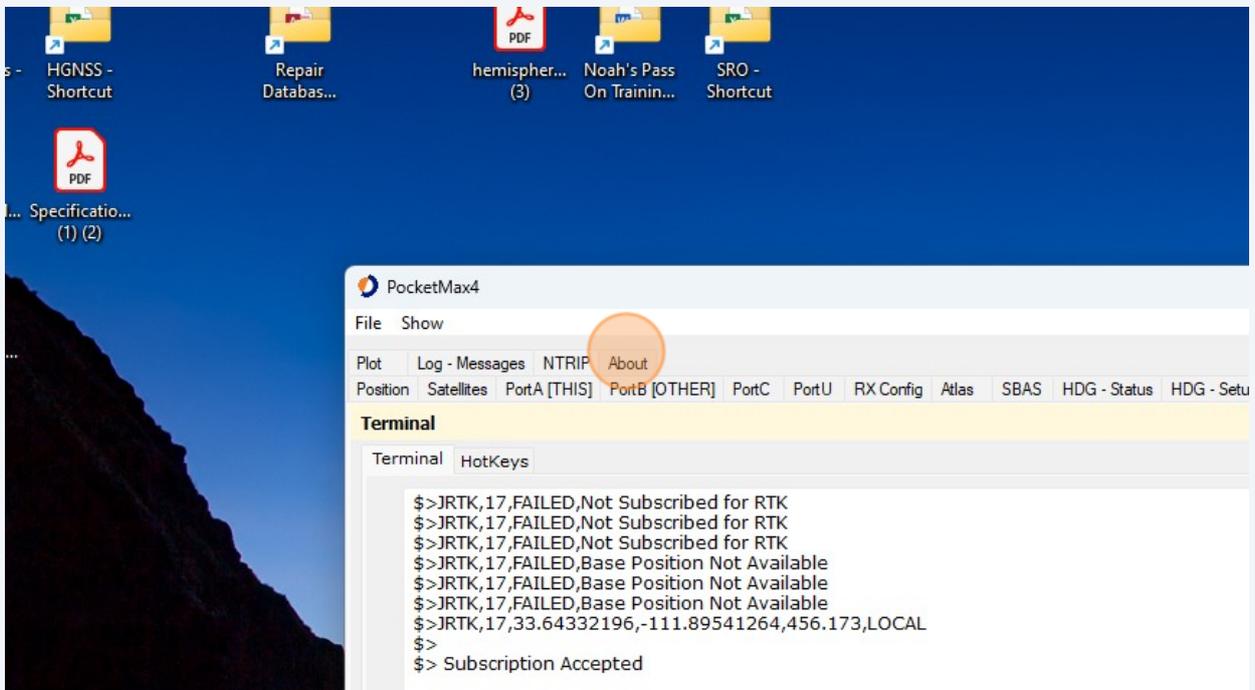


10 Click "Subscription Code:"

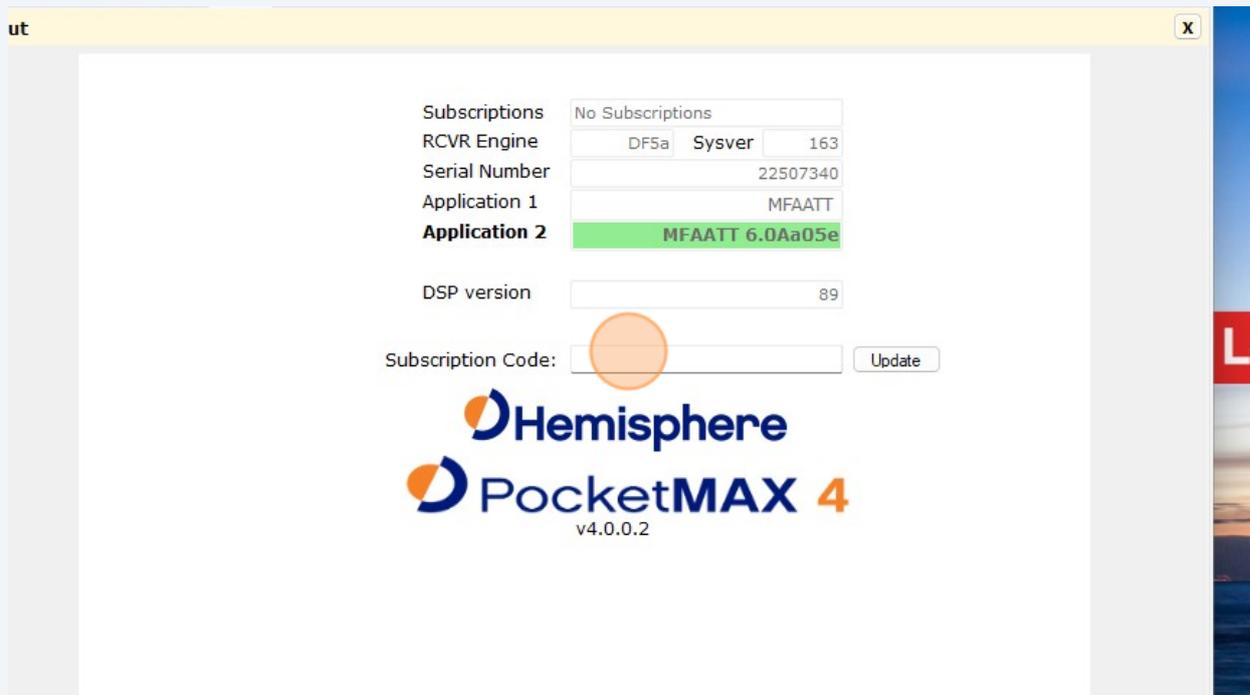

11 Enter the activation code here Without the "\$JK,"

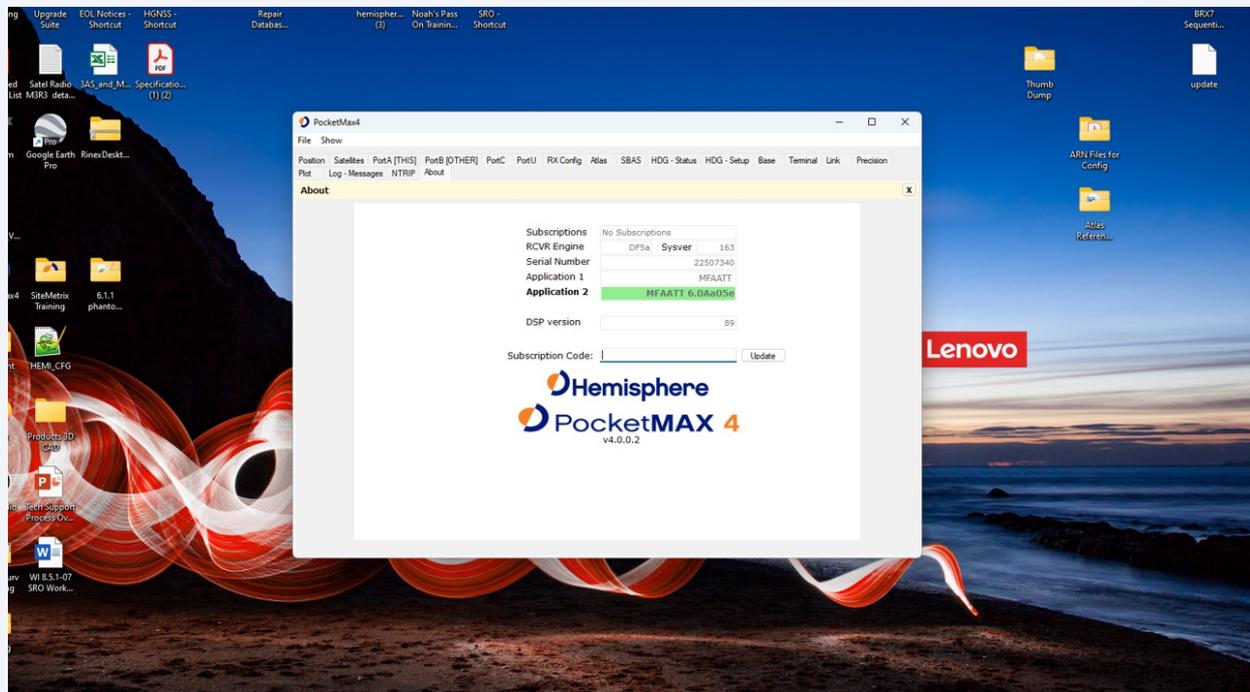

12 Click "Update"

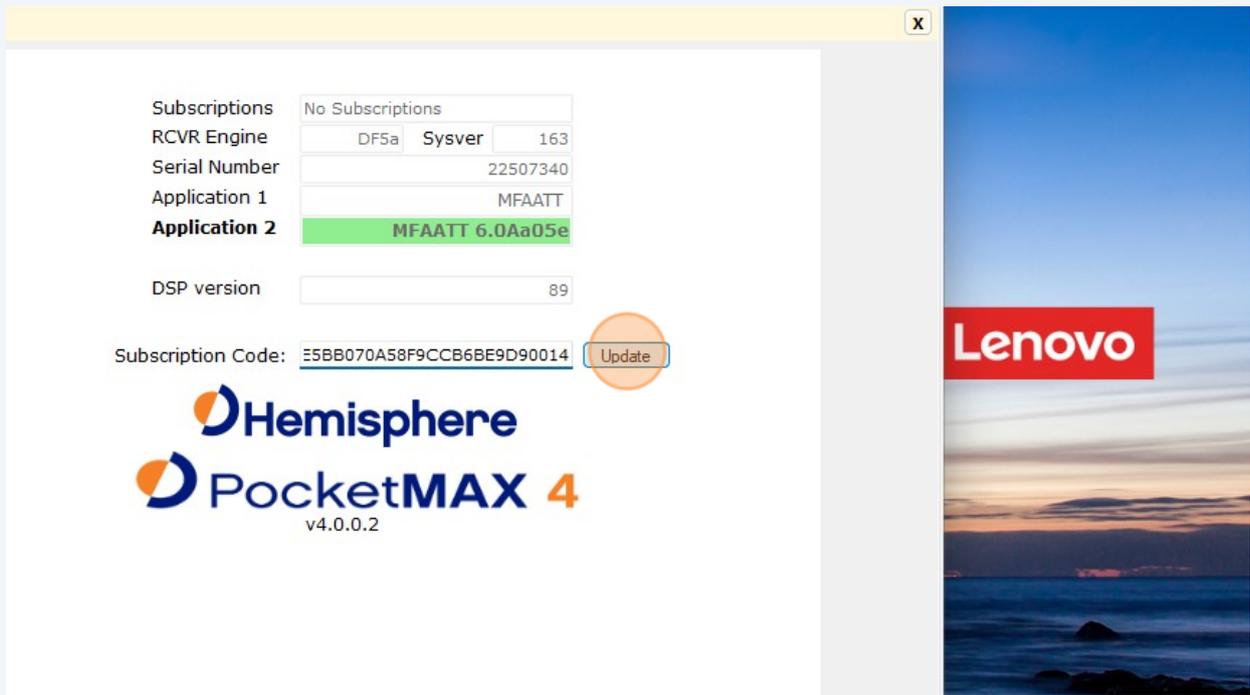

13 And the "Subscriptions" field should automatically update shortly.

