



875-0375-0

User Guide
Revision: A3

**Vector VR500
Smart Antenna**

Table of Contents

Device Compliance, License and Patents.....	4
VR500 Terms & Definitions.....	6
Chapter 1: Introduction	9
Overview	9
Product Overview	9
Key Features.....	12
What’s Included in Your Kit.....	13
Firmware Upgrades.....	14
Chapter 2: Installing the VR500	19
Overview	19
Mounting the VR500.....	20
UHF Radio Antenna.....	33
Ports	34
Selecting Baud Rates and Message Types	35
Connecting the VR500 to External Devices	36
Chapter 3: Understanding the VR500.....	40
Overview	40
Differential and RTK Operation.....	41
SBAS Tracking.....	42
Athena RTK.....	43
Atlas L-band	44
Supported Constellations.....	45
Supplemental Sensors.....	46
Time Constants	49
Chapter 4: Operating the VR500.....	51
Overview	51
Powering the Receiver On/Off.....	52

LED Indicators	53
Configuring the VR500 Using the WebUI.....	54
Appendix A: Troubleshooting	79
Overview	79
Troubleshooting.....	80
Appendix B: Technical Specifications.....	83
Technical Specifications	83
VR500 Technical Specifications.....	84
Index.....	89
End User License Agreement	91
Warranty Notice.....	95

Device Compliance, License and Patents

Device Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This product complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at [HTTPS://HEMISPHEREGNSS.COM/ABOUT-US/QUALITY-COMMITMENT](https://hemispheregnss.com/about-us/quality-commitment).

E-Mark Statement: This product is not to be used for driverless/autonomous driving.

Copyright Notice

Copyright Hemisphere GNSS, Inc. (2018). All rights reserved.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Hemisphere GNSS.

Trademarks

Hemisphere GNSS®, the Hemisphere GNSS logo, TRACER™, Crescent®, Eclipse™, e-Dif®, L-Dif™, PocketMax4™, S320™, SBX-4™, Vector™, XF1™, and XF2™ are proprietary trademarks of Hemisphere GNSS, Inc. Other trademarks are the properties of their respective owners.

Patents

Hemisphere GNSS products may be covered by one or more of the following patents:

Patents			
6111549	6876920	7400956	8000381
6397147	7142956	7429952	8018376
6469663	7162348	7437230	8085196
6501346	7277792	7460942	8102325
6539303	7292185	7689354	8138970
6549091	7292186	7808428	8140223
6711501	7373231	7835832	8174437
6744404	7388539	7885745	8184050
6865465	7400294	7948769	8190337
8214111	8217833	8265826	8271194
8307535	8311696	8334804	RE41358

Australia Patents	
2002244539	2002325645
2004320401	

Continued on next page

Device Compliance, License and Patents, Continued

Notice to Customers Contact your local dealer for technical assistance. To find the authorized dealer near you:

Hemisphere GNSS, Inc
8515 East Anderson Drive
Scottsdale, AZ 85255 USA
Phone: (480) 348-6380
Fax: (480) 270-5070
PRECISION@HGSS.COM
WWW.HGSS.COM

Technical Support If you need to contact Hemisphere GNSS Technical Support:

Hemisphere GNSS, Inc.
8515 East Anderson Drive
Scottsdale, AZ 85255 USA
Phone: (480) 348-6380
Fax: (480) 270-5070
SUPPORT.HGSS.COM

**Documentation
Feedback**

Hemisphere GNSS is committed to the quality and continuous improvement of our products and services. We urge you to provide Hemisphere GNSS with any feedback regarding this guide by opening a support case at the following website: SUPPORT.HGSS.COM

VR500 Terms & Definitions

Introduction The following table lists the terms and definitions used in this document.

VR500 Terms & definitions

Term	Definition
1PPS	1 pulse-per-second is a pulse output by the receiver precisely once per second and is used for hardware synchronization.
Activation	Activation refers to a feature added through a one-time purchase. For features that require recurring fees, see Subscription .
Atlas	Atlas is a subscription-based service provided by Hemisphere that enables the VR500 to achieve sub-decimeter accuracy without a base station or datalink.
Base Station	The Base Station is a receiver placed over a familiar point, provides real-time observations, and sends those observations to nearby RTK rovers via UHF radio or the internet.
BeiDou	BeiDou is a Chinese satellite-based navigation system.
DGPS/DGNSS	Differential GPS/GNSS refers to a receiver using Differential Corrections.
Differential Corrections	A method of improving precision of a GNSS rover. Two GNSS receivers placed in a nearby area will have similar error. A base station is placed over a known point. Since the actual position of the base station is known, error can be calculated, and corrections can then be applied to nearby rovers. This differs from RTK.

Continued on next page

VR500 Terms & Definitions, Continued

VR500 Terms & definitions, continued

Term	Definition
Elevation Mask	Elevation Mask is the minimum angle between a satellite and the horizon for the receiver to use that satellite in the solution.
Firmware	Firmware is the software loaded into the receiver that controls the functionality of the receiver and runs the GNSS engine.
GALILEO	Galileo is a global navigation satellite system implemented by the European Union and European Space Agency.
GLONASS	Global Orbiting Navigation Satellite System (GLONASS) is a Global Navigation Satellite System deployed and maintained by Russia.
GNSS	Global Navigation Satellite System (GNSS) is a system that provides autonomous 3D position (latitude, longitude, and altitude) and accurate timing globally by using satellites. Current GNSS providers are: GPS, GLONASS and Galileo.
GPS	Global Positioning System (GPS) is a global navigation satellite system implemented by the United States.
Heading	Heading is the angle between true north and the vector calculated from the primary to secondary antenna.
Heading Bias	Heading Bias is an offset applied to the heading value calculated by the receiver.
Multipath	Multipath occurs when the GNSS signal reaches the antenna by two or more paths. This causes incorrect pseudo-range measurements and leads to less precise GNSS solutions.
NMEA	National Marine Electronics Association (NMEA) is a marine electronics organization that sets standards for communication between marine electronics.

Continued on next page

VR500 Terms & Definitions, Continued

VR500 Terms & definitions, continued

Term	Definition
ROX	ROX is a Hemisphere GNSS propriety RTK message format that can be used as an alternative to RTCM3 when both the base and rover are Hemisphere branded.
RTCM	Radio Technical Commission for Maritime Services (RTCM) is a standard used to define RTK message formats so that receivers from any manufacturer can be used together.
RTK	Real-Time-Kinematic (RTK) is a real-time differential GPS method that provides better accuracy than differential corrections.
SBAS	Satellite Based Augmentation System (SBAS) is a system that provides differential corrections over satellite throughout a wide area or region.
Subscription	A subscription is a feature that is enabled for a limited time. Once the end-date of the subscription has been reached, the feature will turn off until the subscription is renewed.
WAAS	Wide Area Augmentation System (WAAS) is a satellite-based augmentation system (SBAS) that provides free differential corrections over satellite in parts of North America.

Chapter 1: Introduction

Overview

Introduction This User Guide provides information to help you quickly set up your Vector VR500 GNSS Smart Antenna™. You can download this manual from the Hemisphere GNSS website at WWW.HGNSS.COM.

Contents

Topic	See Page
Product Overview	9
Key Features	12
What's Included in Your Kit	13
Firmware Upgrades	14

Product Overview

Product overview Based on Eclipse Vector™ GNSS technology, the VR500 (Figure 1-1) is designed for machine control applications that require precise heading and RTK position performance from the Vector VR500 GNSS Smart Antenna.

Featuring an all-in-one Hemisphere GNSS Eclipse Vector-based receiver and two integrally separated antennas, with a baseline of 50.0 cm. The VR500 achieves heading accuracy of up to 0.17° RMS (depending on environmental conditions) and offers robust positioning performance.



Figure 1-1 VR500 Smart Antenna

Continued on next page

Product Overview, Continued

Product overview, continued

The VR500 provides accurate and reliable heading and position information at high update rates by using a high performance GNSS receiver and two antennas for GNSS signal processing.

One antenna is designated as the primary GNSS antenna, and the other antenna is the secondary GNSS antenna. Positions computed by the VR500 are referenced to the phase center of the primary GNSS antenna. Heading data references the Vector formed from the primary GNSS antenna phase center to the secondary GNSS antenna phase center.

The standard model VR500 tracks GPS, GLONASS, Galileo, and BeiDou satellites.

The VR500 can be upgraded via activations or subscriptions to support Athena RTK and Atlas L-band.

Athena RTK

Athena RTK (Real Time Kinematic) technology is available on Eclipse-based GNSS receivers. This is Hemisphere's most advanced RTK processing software and can be added to the VR500 as an activation.

Athena RTK has the following benefits:

- **Improved Initialization time** - Performing initializations in less than 15 seconds at better than 99.9% of the time
 - **Robustness in difficult operating environments** - Extremely high productivity under the most aggressive of geographic and landscape-oriented environments
 - **Performance on long baselines** - Industry-leading position stability for long baseline applications
-

Continued on next page

Product Overview, Continued

Atlas L-band

Atlas L-band is Hemisphere's industry leading correction service, which can be added to the VR500 as a subscription. Atlas L-band has the following benefits:

- **Positioning accuracy** - Competitive positioning accuracies down to 4 cm RMS in certain applications
 - **Positioning sustainability** - Cutting edge position quality maintenance in the absence of correction signals, using Hemisphere's patented technology
 - **Scalable service levels** - Capable of providing virtually any accuracy, precision and repeatability level in the 4cm to 50cm range
 - **Convergence time** - Industry-leading convergence times of 10-40 minutes
-

For more information

For more information about Athena RTK, see:

[HTTP://HEMISPHEREGNSS.COM/TECHNOLOGY](http://HEMISPHEREGNSS.COM/TECHNOLOGY)

For more information about Atlas L-band, see:

[HTTP://HEMISPHEREGNSS.COM/ATLAS](http://HEMISPHEREGNSS.COM/ATLAS)

Key Features

VR500 key features

Key features of the VR500 include:

- Easy to use all-in-one robust GNSS smart antenna
 - High-precision positioning in Athena RTK, Atlas L-band, and SBAS
 - Athena technology for improved RTK performance, especially with GLONASS, Galileo, and BeiDou
 - Atlas* L-band technology providing highly accurate corrections over the air (*Requires the purchase of a subscription)
 - Heave of 30cm RMS (DGNS), 10cm (RTK)
 - Pitch and roll < 1° RMS
-

What's Included in Your Kit

VR500 kit Table 1-1 lists the parts included with your VR500. The VR500 GNSS Smart Antenna and the power/data cable (accessory item) are the only two required components.

Note: The VR500's parts comply with IEC 60945 Section 4.4: "Exposed to the weather."

VR500 Parts list **Table 1-1 VR500 Parts list**

Part No.	Description	Qty
940-3121-10	HGNSS VR500 Receiver	1
752-0028-10	VR500 Receiver	1

All the following items are available for purchase separately from your VR500 receiver:

Part No.	Description	Qty
054-0181-10	Power/data cable, 15m (includes clamp, screw, washer)	1
710-0147-10	VR500 External UHF, B/T Kit	1

Firmware Upgrades

Overview

Periodically, Hemisphere GNSS releases firmware upgrades to improve performance, fix bugs, or add new features to a product. To update the firmware on the VR500, choose from one of two options:

1. Download the latest version of Hemisphere GNSS RightArm from the following link:

[HTTPS://HEMISPHEREGNSS.COM/RESOURCES-SUPPORT/SOFTWARE](https://hemispheregnss.com/resources-support/software)

2. Use the internal WebUI.
-

RightArm Updates

Connect the VR500 to a computer over serial. Firmware can be loaded over either serial port. Set the baud rate of the serial port you are using to 19200.

Launch RightArm.

Click the **Connect** button or navigate to Receiver -> Connect.




Continued on next page

Firmware Upgrades, Continued

**RightArm
Updates,
continued**

Choose the COM port connected to the VR500 and click **OK**.

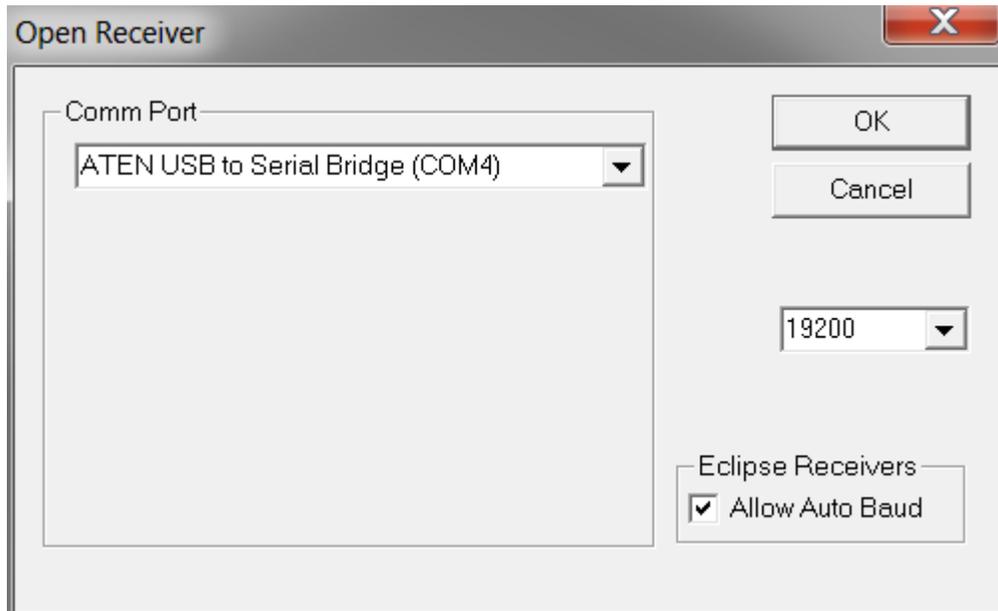


Note: The baud rate of the serial port should be set to 19200 bps. Select **Allow Auto Baud** to change the baud rate during the firmware upgrade for a faster update.

Continued on next page

Firmware Upgrades, Continued

RightArm
Updates,
continued

Click the **Programming** button.

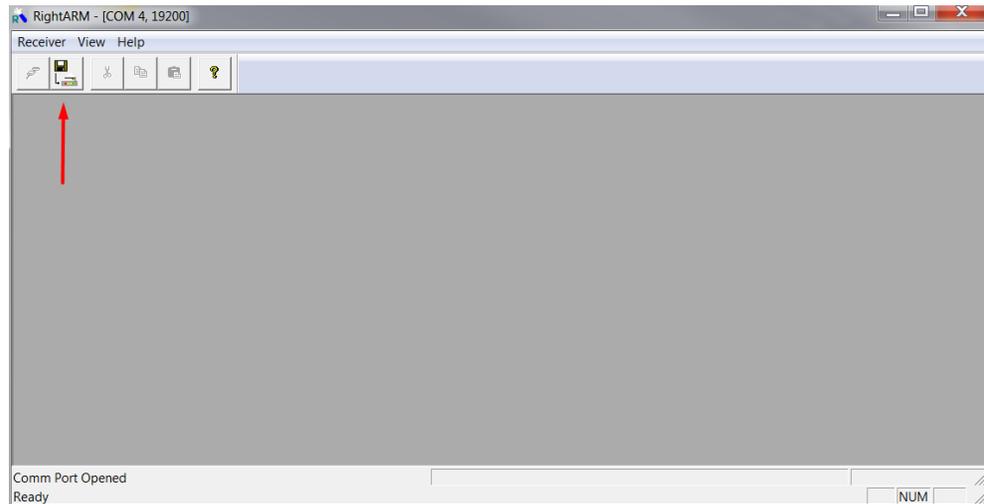

Select a **Program Type**.

The VR500 has two firmware applications, allowing two different versions of GNSS firmware. Hemisphere GNSS suggests loading the new firmware onto both applications.

After the firmware update is completed, check the current GNSS firmware.

If the current firmware is not the same as the newly loaded firmware, the VR500 could be using the other application. You can switch applications by sending the following command:


```
$JAPP,OTHER.
```

Choose the Application, and press **Select File** to select the firmware file.

Continued on next page


Firmware Upgrades, Continued

RightArm Updates, continued

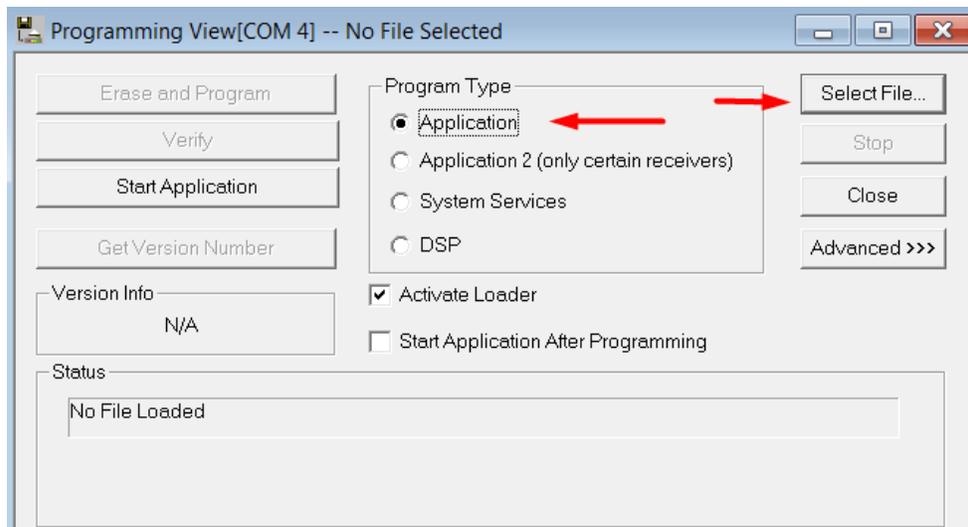

Choose the firmware, and click **Erase and Program**.

The **Activate Loader** checkbox in the Programming View window is selected. After pressing the Erase and Program button, this checkbox will de-select, and the **Status** field indicates the receiver is in loader mode (ready to receive the new firmware file).

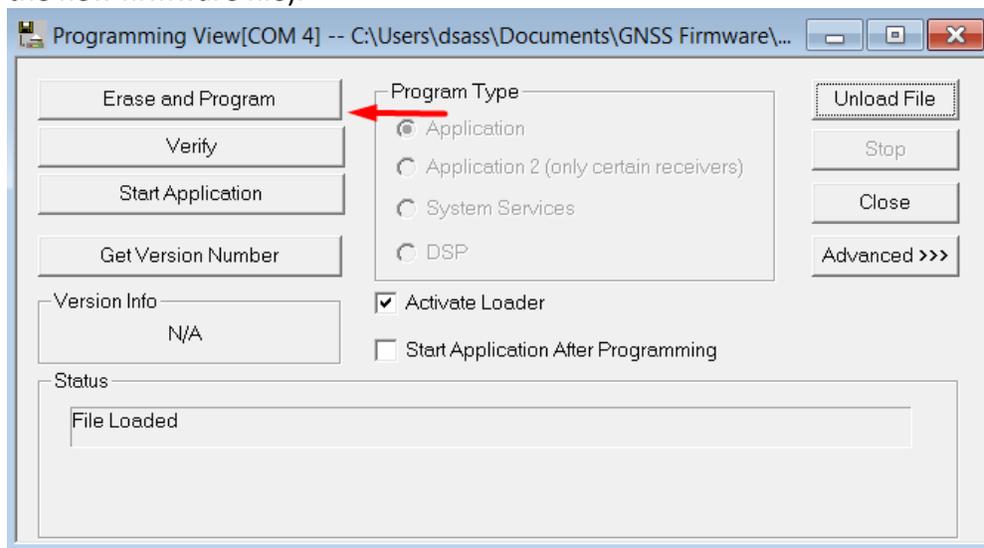


Continued on next page

Firmware Upgrades, Continued

RightArm Updates,
continued

Note: If the Activate Loader check box remains selected, power the receiver off and on. When the receiver powers back on, the Activate Loader box should be de-selected.

⚠ WARNING: Do not to interrupt the power supply to the receiver, and do not interrupt the communication link between the PC and the receiver until programming is complete. Failure to do so may cause the receiver to become inoperable and will require factory repair.

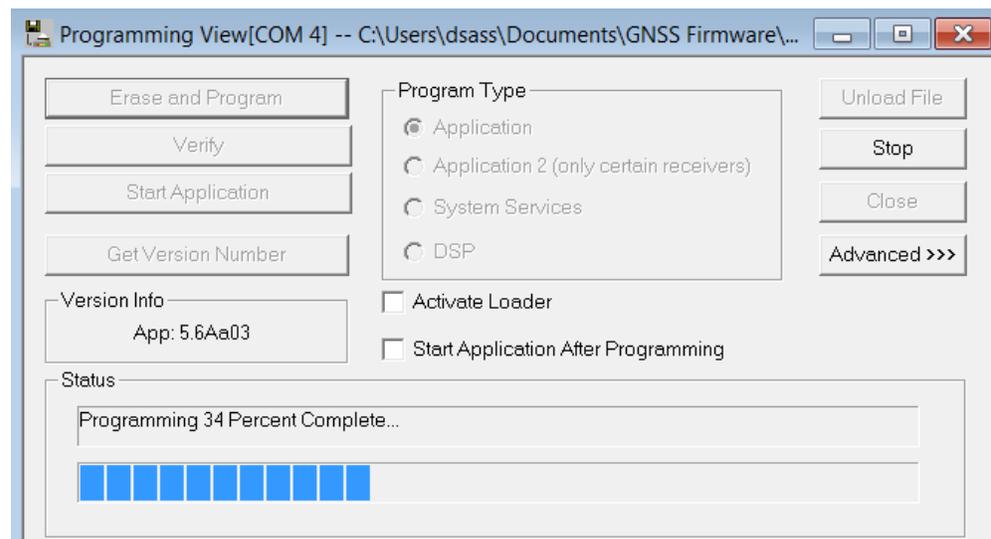

Note: After completing the firmware update, Hemisphere GNSS suggests repeating this process for the other application.

Chapter 2: Installing the VR500

Overview

Introduction This chapter provides instructions on how to mount and install your VR500 receiver.

Contents

Topic	See Page
Mounting the VR500	20
UHF Radio Antenna	33
Ports	34
Selecting Baud Rates and Message Types	35
Connecting the VR500 to External Devices	36

Mounting the VR500

Introduction This section provides information on mounting the VR500 in the optimal location, orientation considerations, environmental considerations, and other mounting options.

GNSS satellite reception When considering where to mount the VR500, consider the following satellite reception recommendations:

- Ensure there is a clear view of the sky available to the VR500 so the GNSS and L-band satellites are not masked by obstructions that may reduce system performance
- Mount the VR500 in a position in respect to the primary GNSS antenna (located on the end opposite the recessed arrow on the underside of the enclosure)
- Locate any transmitting antennas away from the VR500 by at least a few meters to ensure tracking performance is not compromised
- Ensure cable length is adequate to route into the machine to reach a breakout box or terminal strip
- Do not locate the antenna where environmental conditions exceed those specified in Appendix B, Technical Specifications of this document.



Figure 2-1: Recessed arrow

Continued on next page

Mounting the VR500, Continued

Environmental considerations

Hemisphere Vector Smart Antennas are designed to withstand harsh environmental conditions; however, adhere to the following limits when storing and using the VR500:

- Operating temperature: -40°C to +70°C (-40°F to +158°F)
 - Storage temperature: -40°C to +85°C (-40°F to +185°F)
 - Humidity: IEC 16750-4:2010 Section 5.6 Humid heat, cyclic test
-

Mounting orientation

The VR500 outputs heading, pitch, and roll readings regardless of the orientation of the antennas. The relation of the antennas to the machine's axis determines if you need to enter a heading, pitch, or roll bias.

The primary antenna is used for positioning and the primary and secondary antennas, working in conjunction, output heading, pitch, and roll values.

Parallel orientation

Parallel installation orients the VR500 parallel to, and along the centerline of, the axis of the machine. **This provides a true heading.** In this orientation:

- If you use a gyrocompass and there is a need to align the Vector smart antenna, you can enter a heading bias in the VR500 to calibrate the physical heading to the true heading of the machine.
 - You may need to adjust the pitch/roll output to calibrate the measurement if the Vector is not installed in a horizontal plane.
-

Perpendicular orientation

You can also install the antennae so they are oriented perpendicular to the centerline of the machine's axis. In this orientation:

- Enter a heading bias of +90° if the primary antenna is on the right side of the machine and -90° if the primary antenna is on the left side of the machine.
 - Configure the receiver to specify the GNSS smart antenna is measuring the roll axis using the VR500 WebUI.
 - Enter a roll bias to properly output the pitch and roll values.
 - You may need to adjust the pitch/roll output to calibrate the measurement if the Vector is not installed in a horizontal plane.
-

Continued on next page

Mounting the VR500, Continued

Mounting
orientation
example

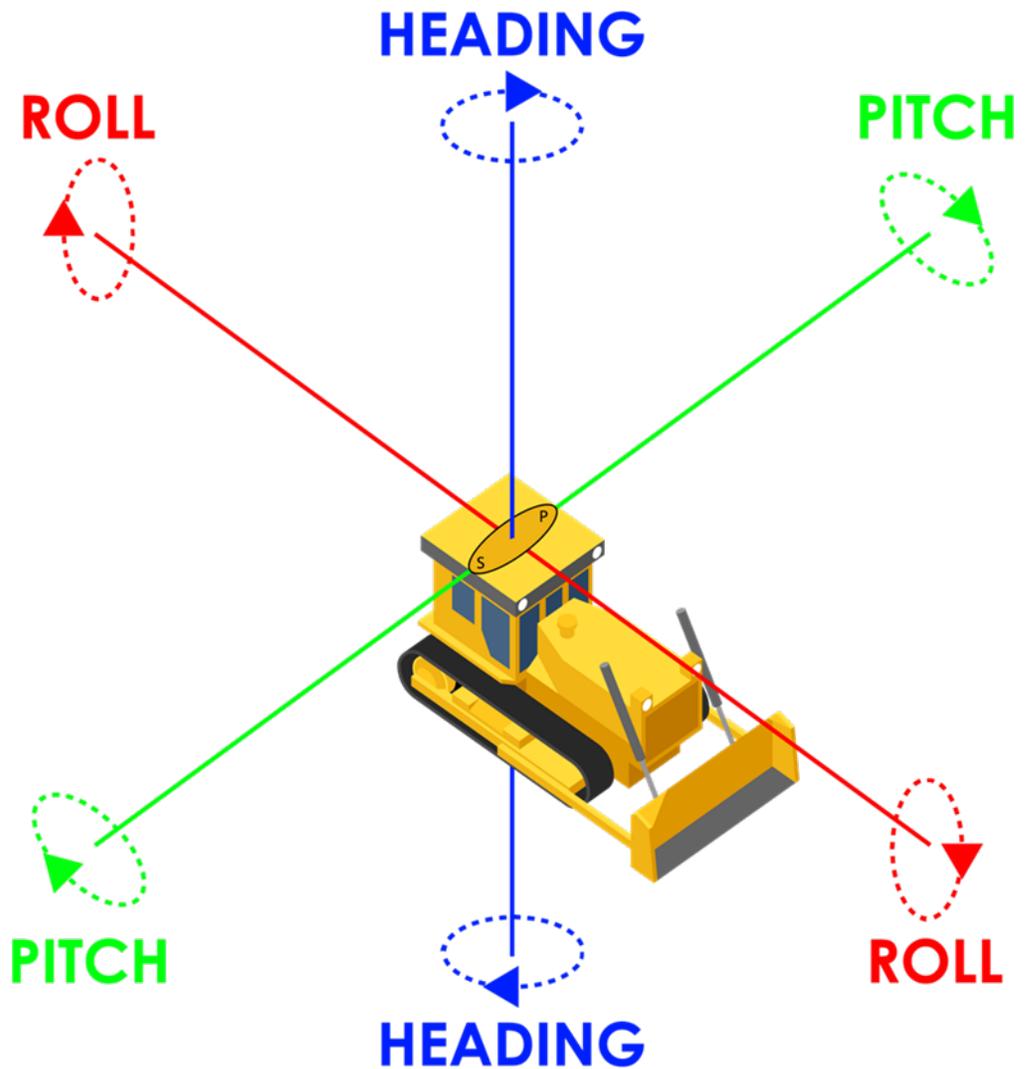


Figure 2-2: Recommended orientation and resulting signs of HPR values

Continued on next page

Mounting the VR500, Continued

Mounting
orientation
example,
continued

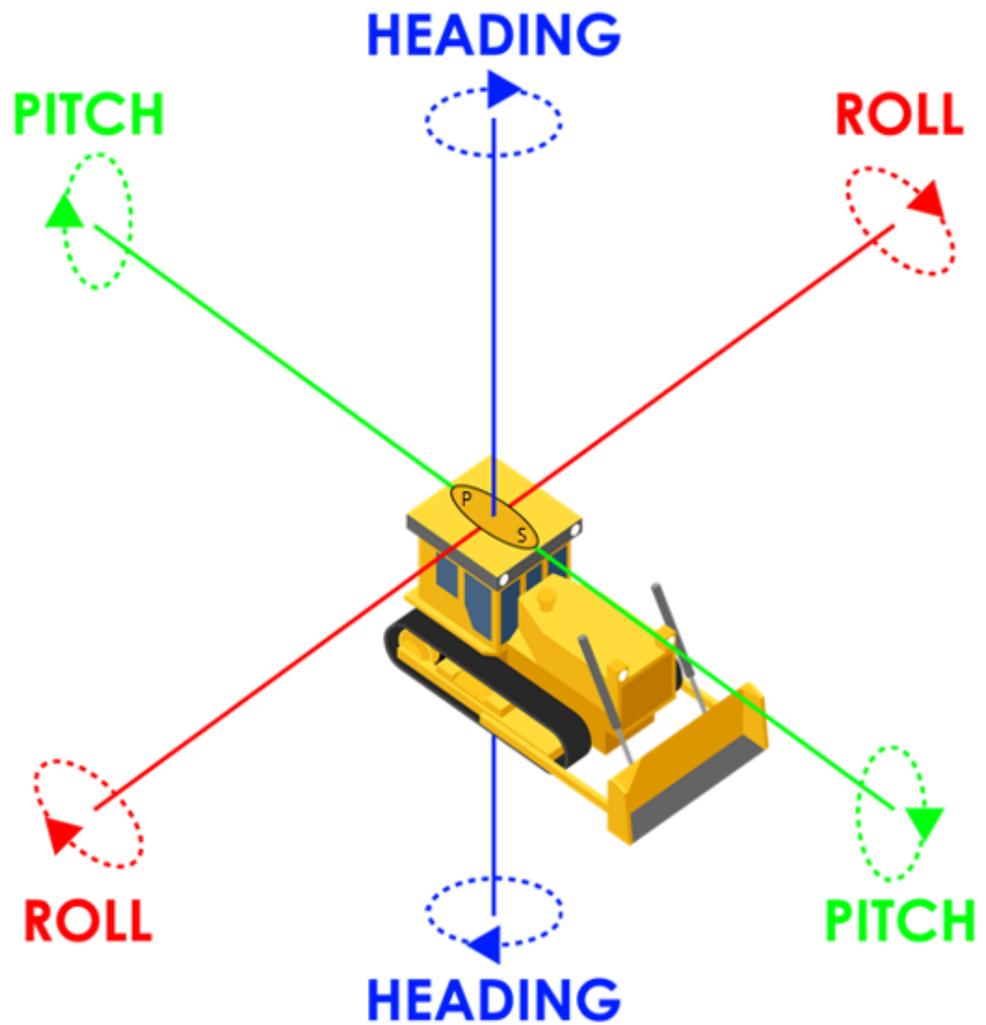


Figure 2-3: Alternate orientation and resulting signs of HPR values

Continued on next page

Mounting the VR500, Continued

Mounting alignment

The top of the VR500 enclosure incorporates sight design features to help you align the enclosure on your machine.

To use the sights, center the small post on the opposite side of the enclosure from you, within the channel made in the medallion located in the center of the enclosure top as shown in Figure 2-4 and Figure 2-5.

The long site alignment accuracy (Figure 2-4) is approximately $\pm 1^\circ$. Short site alignment accuracy (Figure 2-5) is approximately $\pm 2.5^\circ$.



Figure 2-4: Long site alignment

Continued on next page

Mounting the VR500, Continued

Mounting alignment, continued

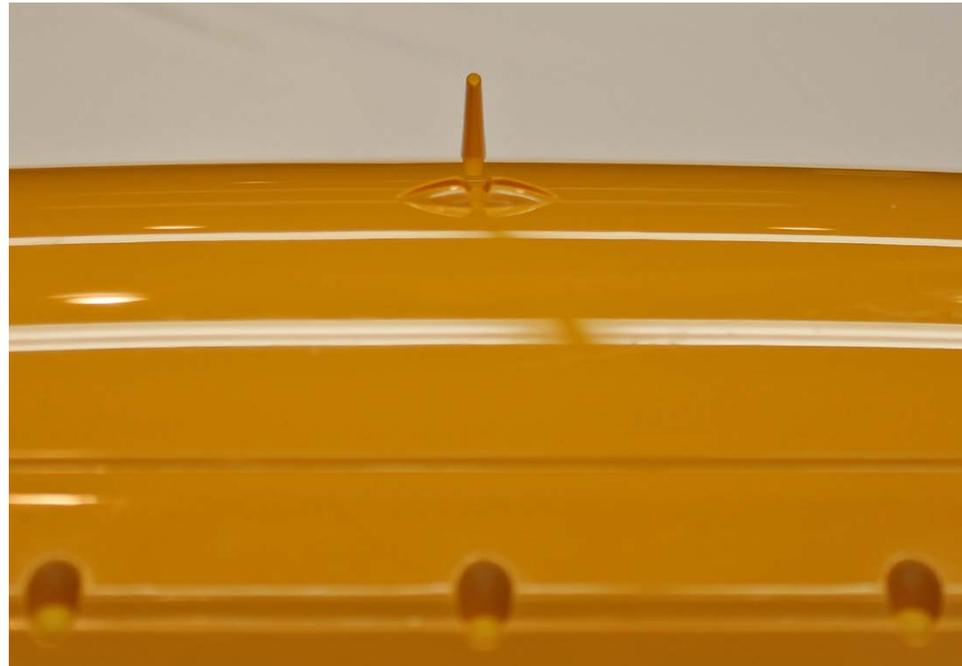


Figure 2-5: Short sight alignment

Mounting options

The VR500 allows for two different mounting options: flush-mount and pole-mount.

1. **Flush-mount**-The bottom of the VR500 contains eight M8-1.25 holes for flush mounting the unit to a flat surface (see Figure 2-7). The eight holes comprise two sets of four holes. Flush mounting does not provide any additional dampening to the receiver. The VR500 can be mounted using an optional mounting bracket. See Table 1-1 for bracket part information.
2. **Pole-mount**-The VR500 can be mounted using a mounting pole.


Note: Hemisphere GNSS does not supply mounting surface hardware or a mounting pole. You must supply the appropriate mounting hardware required to complete VR500 installation.

Continued on next page

Mounting the VR500, Continued

VR500 dimensions

Figure 2-6 illustrates the physical dimensions of the VR500.

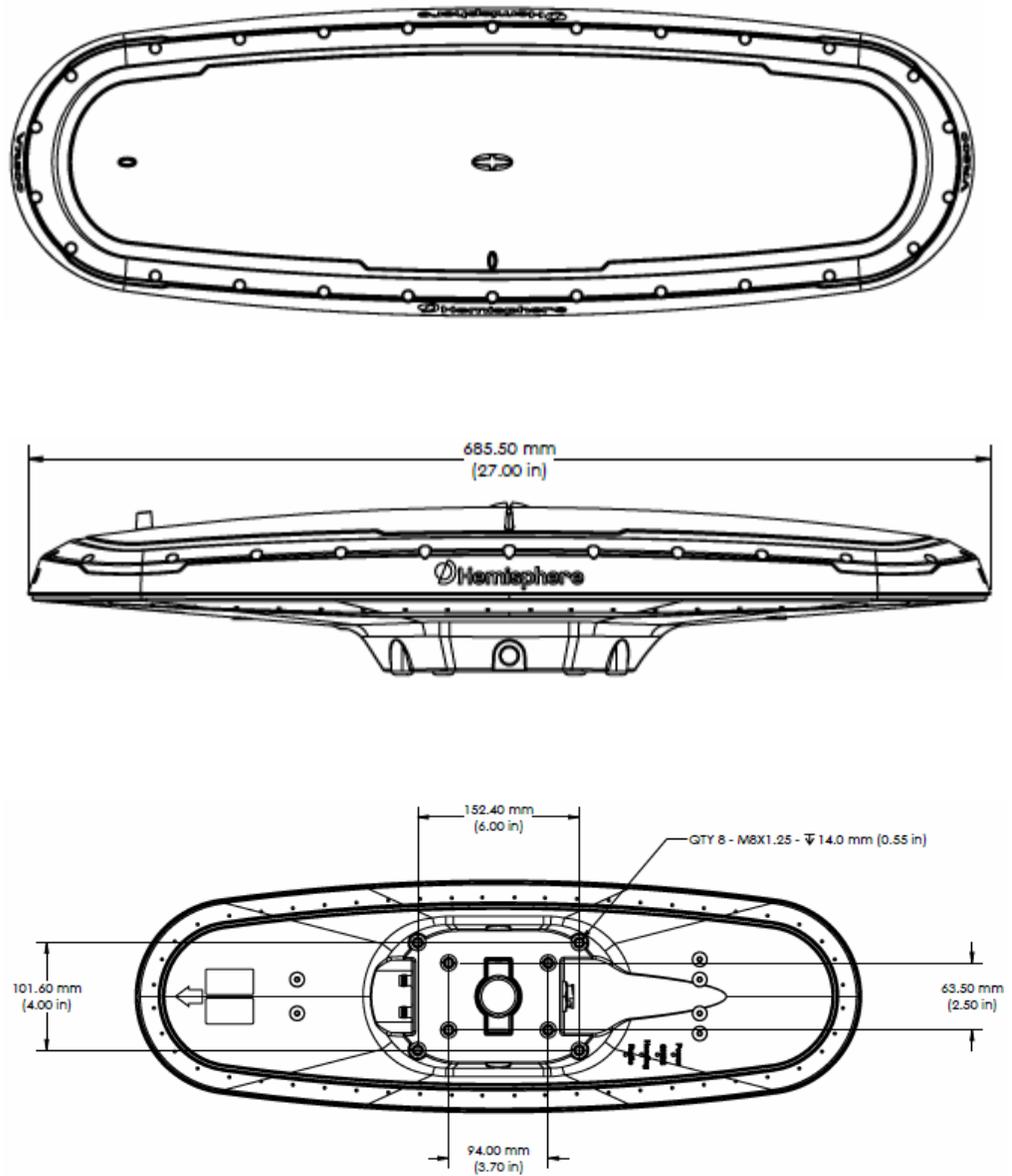

Continued on next page

Mounting the VR500, Continued

VR500
dimensions,
continued


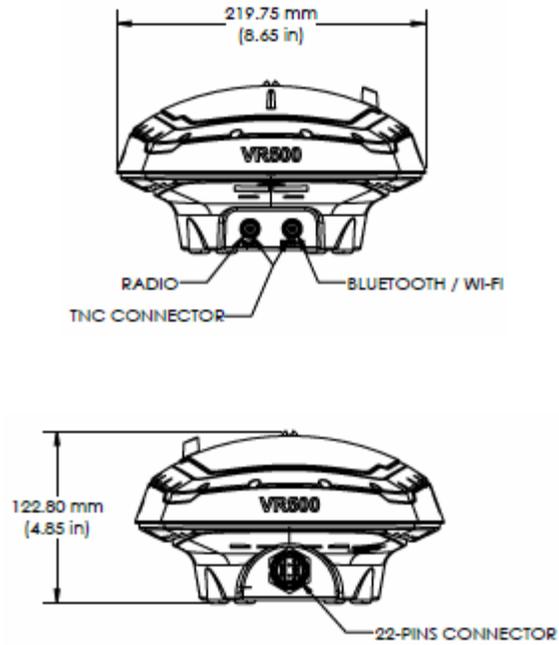


Figure 2-6: VR500 dimensions

Figure 2-7 shows the VR500 with remote antennas dimensions.

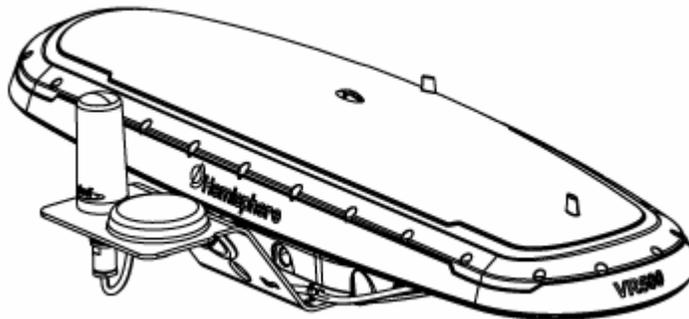

Continued on next page

Mounting the VR500, Continued

VR500
dimensions,
continued

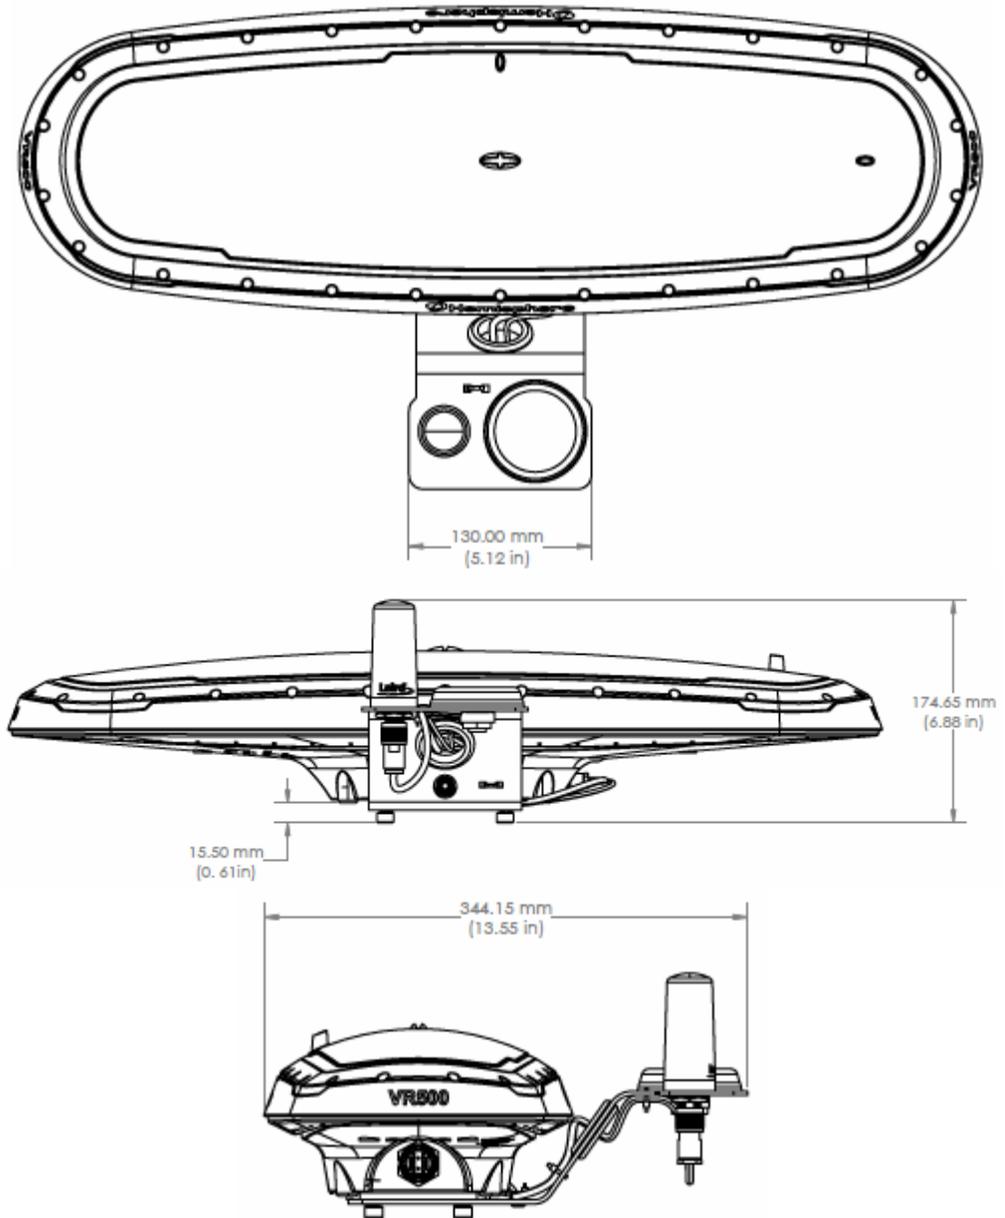


Figure 2-7 VR500 with remote antennas dimensions

Continued on next page

Mounting the VR500, Continued

Power/Data cable considerations

Before mounting the VR500, consider the following regarding power/data cable routing:

Do	Do not
Ensure cable reaches appropriate power source	Run cables in areas of excessive heat
Keep cable away from corrosive chemicals	Run cables through a door or window jams
Connect to a data storage device, computer, or other device that accepts GNSS data	Crimp or excessively bend the cable
Keep cable away from rotating machinery	Place tension on the cable
Remove unwanted slack from the cable at the VR500 end	
Secure along the cable route using plastic wrapping	

⚠ WARNING: Improperly installed cable near machinery can be dangerous.

Connecting the Serial Power/Data cable

1. Align the cable connector key-way with the VR500 connector key.
2. Rotate the cable ring clockwise until it locks. The locking action is firm; you will feel a positive “click” when it has locked.
3. Attach the power/data cable to the cable clamp.
4. Fasten the clamp to the bottom of the VR500 using the screw and washer.

Continued on next page

Mounting the VR500, Continued

Flush-mounting the VR500

The bottom of the VR500 contains eight holes (two sets of four holes) for flush-mounting the unit to a flat surface (Figure 2-8).



Figure 2-8: Flush-mounting holes on bottom of VR500

Continued on next page

Mounting the VR500, Continued

Assembly drawing


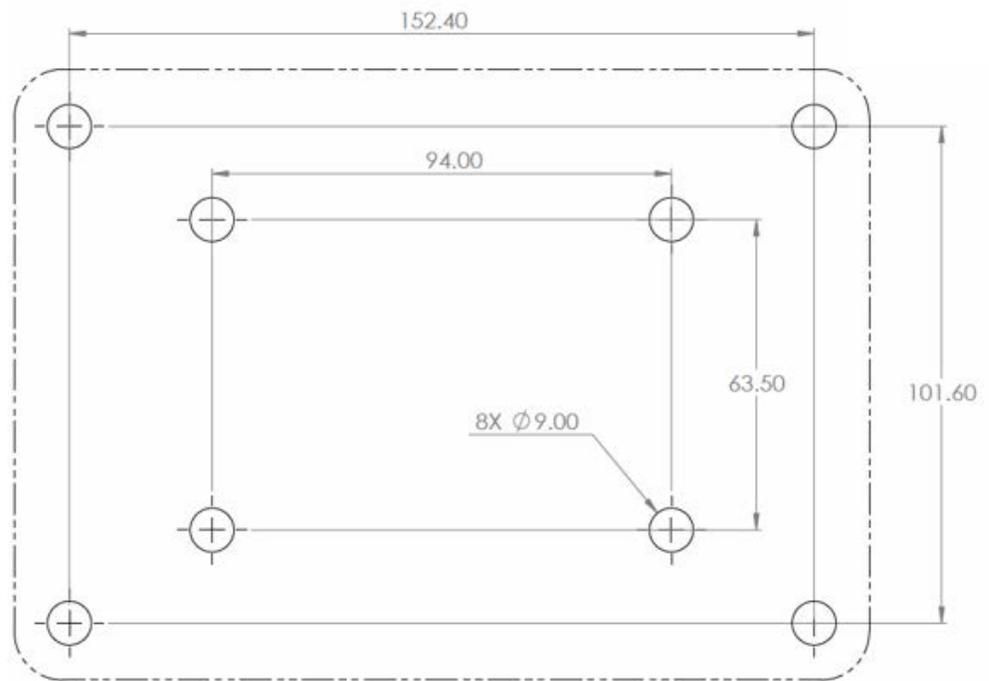


Figure 2-9: Assembly drawing

Pole-mounting the VR500

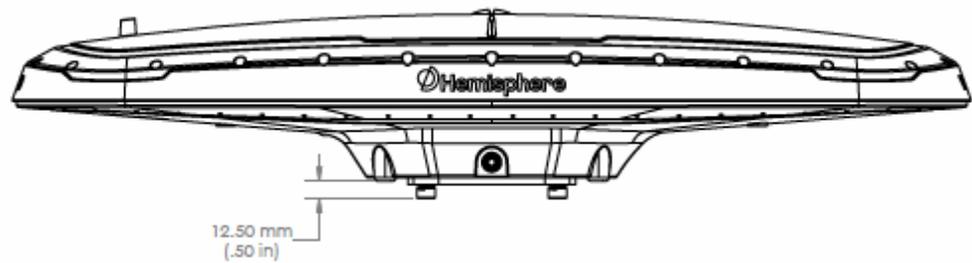

Continued on next page

Mounting the VR500, Continued

Pole-mounting
the VR500,
continued

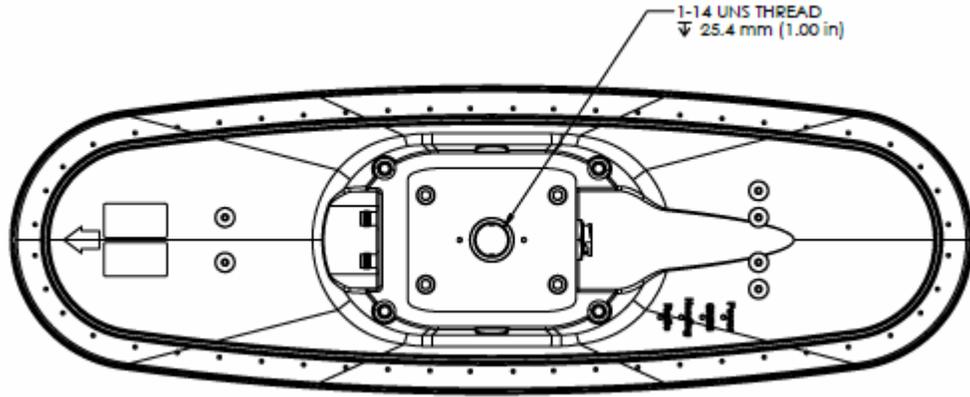


Figure 2-10: Pole-mounting specifications

UHF Radio Antenna

VR500 UHF Radio Antenna

The VR500 has an internal UHF radio for receiving RTK corrections.

The VR500 also has an internal UHF radio antenna to receive RTK with no need for an external radio or antenna.

If the UHF range needs to be increased, an external antenna can be installed using a TNC connector.

If ...	Then ...
RTK corrections are to be sent to the internal UHF radio	an external UHF radio antenna may be installed for increased range, or the internal radio antenna can be used. Note: The VR500 has an external TNC connector (opposite side as the power/data cable).
an external antenna is to be used	the UHF antenna should be mounted to the top of the machine and the coaxial cable should be run safely and securely to the VR500.



Figure 2-11: UHF antenna connections

Ports

Overview

The VR500 offers serial port, CAN, and Ethernet port functionality.

Serial ports

The VR500 has two serial ports:

- Port A can be both full-duplex RS-232 and half-duplex RS-422 (transmit only)
- Port B is full-duplex RS-232 or RS-422

You can receive external differential corrections via either Port A (full-duplex RS-232) or Port B (full-duplex RS-232 or full-duplex RS-422). You can connect up to three devices at one time using two ports.

One device can receive data via Port A (RS-422 transmit only) while two devices can transmit and receive data via Ports A and B (one connected to Port A RS-232 and one connected to Port B).

You can update firmware via Port A (RS-232) or Port B.

Note: The VR500 has maximum baud rate of 115200.

Serial port configuration

You may configure Port A or Port B of the GNSS receiver to output any combination of data.

Port A can have a different configuration from Port B in data message output, data rates, and the baud rate of the port, and configure the ports independently based upon your needs. Both RS-232 and RS-422 output signals may be used simultaneously.

The RS-232 Port A and RS-422 Port A output the same data messages at the same baud rate. If the baud rate or messages for the RS-422 port need to be changed, this needs to be commanded through the RS-232 port.

Note: For successful communications, use the 8-N-1 protocol and set the baud rate of the VR500's serial ports to match that of the devices to which they are connected. Flow control is not supported.

Selecting Baud Rates and Message Types

Baud Rates & Message Types

When selecting your baud rate and message types, use the following formula to calculate the bits/sec for each message and sum the results to determine the baud rate for your required data throughput.

Message output rate * Message length (bytes) * bits in byte = Bits/second
(1 character = 1 byte, 8 bits = 1 byte, use 10 bits/byte to account for overhead).

For information on message output rates refer to the [Hemisphere GNSS Technical Reference Manual](#).

Connecting the VR500 to External Devices

Recommendations for connecting to other devices

When interfacing to other devices, ensure the transmit data output and the signal grounds from the VR500 is connected to the data input of the other device.

The RS-422 is a balanced signal with positive and negative signals referenced to ground; ensure you maintain the correct polarity.

When connecting the transmit data output positive signal to the receive line of the other device, it should be connected to the receive positive terminal.

The negative transmit data signal from the VR500 is then connected to the receive data negative input of the other device.

For a list of Hemisphere GNSS commands, please refer to the [Hemisphere GNSS Technical Reference Manual](#). To configure the unit through the WebUI, please refer to [Configuring the VR500 using WebUI](#).

Power/Data cable considerations

The VR500 uses a single 15m (49 ft) cable for power and data input/ output.

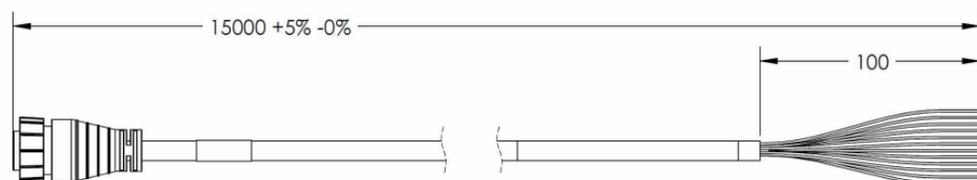


Figure 2-12: Power/Data cable, 15m

Note: Cover drain wire with black shrink tube.

The receiver end of the cable is terminated with an environmentally-sealed 22-pin connection while the opposite end is unterminated and requires field stripping and tinning.

Continued on next page

Connecting the VR500 to External Devices, Continued

Power/Data cable considerations, continued

Depending on the application and installation needs, you may need to shorten this cable. However, if you require a longer cable run than 15m, you can bring the cable into a break-out box that incorporates terminal strips, within the machine.

When lengthening the cable keep the following in mind:


- To lengthen the serial lines inside the machine, use 20-gauge twisted pairs and minimize the additional wire length.
- When lengthening the power input leads to the VR500, ensure the additional voltage drop is small enough that your power system can continue to power the system above the minimum voltage of the system. Wire of 18-gauge or larger should also be used.
- Minimize RS-232 cable length to ensure reliable communication.

VR500 with 22 to 18 pins adapter

Use the 22 to 18 pin adapter if you want to use a V320 cable.

Note: Using the adapter will cause you to lose ethernet capability.

Figure 2-11 shows the VR500 with 22 to 18 pins adapter.

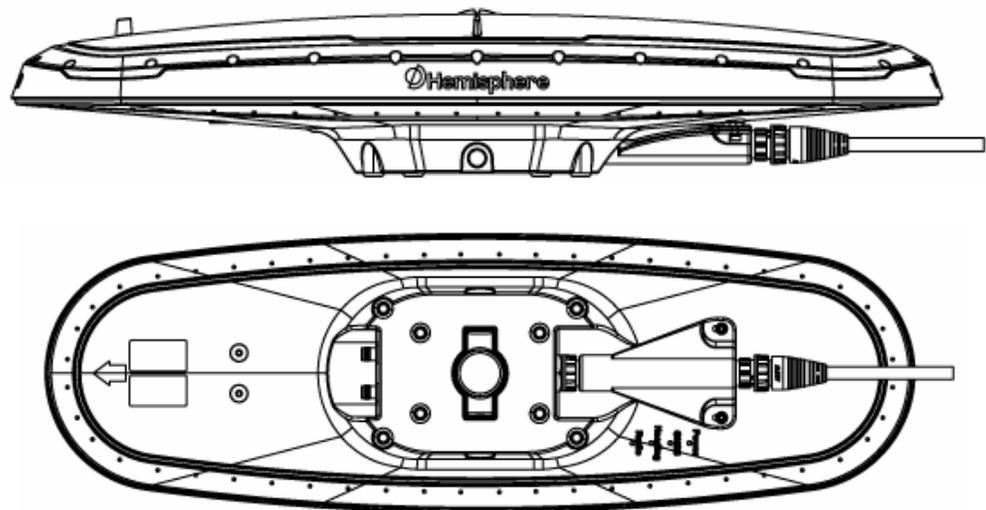

Continued on next page

Connecting the VR500 to External Devices, Continued

VR500 with 22
to 18 pins
adapter,
continued

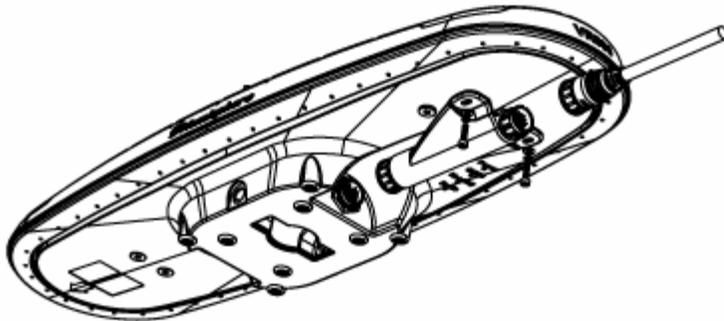


Figure 2-13: VR500 with 22 to 18 pins adapter

Power/data
cable pin-out
assignments

Figure 2-14 shows the power/data cable pin-out assignments.

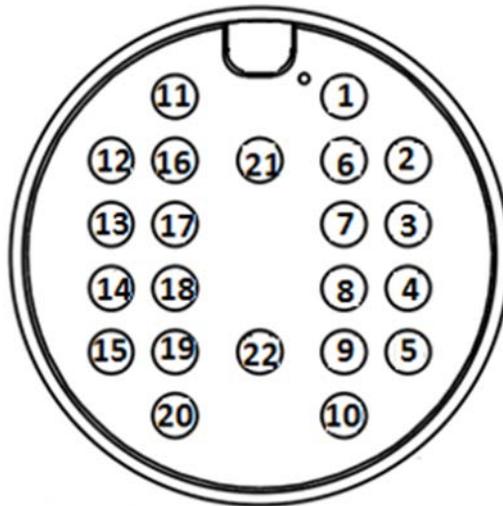


Figure 2-14: VR500 pin-out assignments

Continued on next page

Connecting the VR500 to External Devices, Continued

Power/data
cable pin-out
specifications

Table 2-1 shows the cable pin-out specifications.

Table 2-1: VR500 pin-out specifications

Pin	Signal	Color
1	Power+	Red
2	CAN1_H	Orange-Black stripe
3	CAN1_L	Yellow Black stripe
4	R232_IPT2/RS422_A	Orange
5	RS232_OPT1/RS422_Z	Yellow
6	CAN2_H	Green
7	CAN2_L	Blue
8	RS422_B	Purple
9	RS422_Y	Grey
10	1PPS_OUTPUT	White
11	ECLIPSE-PA-RXD_RS232	Pink
12	ECLIPSE-PA-TXD_RS232	Turquoise
13	GND	Black-White stripe
14	TD+	Brown-White stripe
15	TD-	Red-White stripe
16	HEADING WARNING	Orange-White stripe
17	SPEED_OUTPUT	Green-White stripe
18	RD+	Blue-White stripe
19	RD-	Purple-White stripe
20	MARK_INPUT	Red-Black stripe
21	POWER+	Brown
22	POWER-	Black

Chapter 3: Understanding the VR500

Overview

Introduction

The GNSS receiver begins tracking satellites when it powers up and an antenna has connected to the antenna port on the receiver. Position and heading accuracy vary depending upon location and environment. Position performance can be improved with RTK or DGNSS.

The following sections provide the steps to configure your VR500 to use Atlas, SBAS, or RTK.

Note: Differential source and RTK status impact only positioning and heave. There is no impact to heading, pitch, or roll.

Contents

Topic	See Page
Differential and RTK Operation	41
SBAS Tracking	42
Athena RTK	43
Atlas L-band	44
Supported Constellations	45
Supplemental Sensors	46
Time Constants	49

Differential and RTK Operation

Differential (DGNSS) and RTK operation

The purpose of differential GNSS (DGNSS) and RTK is to remove the effects of atmospheric errors, timing errors and satellite orbit errors, while enhancing system integrity.

Autonomous positioning capabilities of the VR500 will result in positioning accuracies of 2.5m 95% of the time.

To improve positioning quality, the VR500 can receive DGNSS corrections over SBAS, L-band corrections with Hemisphere GNSS' Atlas L-band technology, or RTK corrections over serial.

For more information on the differential services and the associated commands refer to the [Hemisphere GNSS Technical Reference Manual](#).

SBAS Tracking

SBAS tracking SBAS is a standard feature on the VR500 and does not require an activation or subscription code.

The VR500 automatically scans and tracks SBAS signals without the need to tune the receiver.

The VR500 features two-channel tracking that provides an enhanced ability to maintain a lock on an SBAS satellite when more than one satellite is in view.

This redundant tracking approach results in more consistent tracking of an SBAS signal in areas where signal blockage of a satellite is possible.

Note: The VR500 moving base station algorithm uses only GNSS to calculate heading. Differential and RTK corrections are not used in this calculation and will not affect heading accuracy.

Athena RTK

Athena RTK

Athena RTK requires the use of two separate receivers: a stationary base station (primary receiver) that broadcasts corrections over a wireless link to the rover (secondary receiver).

The VR500 can use RTK through either serial port or its internal UHF radio. The receiver uses any RTK message coming in over a serial port if the RTK message type is included in the list of available differential sources.

If you do not know which RTK message type is being sent by the base station, you can include RTCM3, ROX, and CMR.

Including extra differential sources will not affect the receiver if those differential sources are not being received.

After setting the differential source configure the baud rate of the serial port receiving the RTK corrections. Ensure that the serial port configuration of the external device (such as radio or modem) is 8 bits/byte, 1 stop bit, no parity and no flow control.

Connect the external device to the serial port of the VR500. Some cables may require the use of a gender changer and/or null modem adapter. For instructions on configuring the internal UHF radio, please see [Configuring the VR500 Using the WebUI](#).

Atlas L-band

Atlas L-band

Atlas L-band corrections are available worldwide. With Atlas, the positioning accuracy does not degrade as a function of distance to a base station, as the data content is not composed of a single base station's information, but an entire network's information.

The VR500 can calculate a position with 4 cm RMS (horizontal) accuracy in an industry-leading time of 20 minutes.

To configure the receiver to use Atlas L-band, a subscription must be purchased.

Supported Constellations

GLONASS, Galileo & BeiDou

VR500 is available in its base form as L1 GPS, G1 GLONASS, E1 Galileo, and B1 BeiDou.

By adding multi-frequency GPS, GLONASS, Galileo, and BeiDou, the number of available signals increases, improving the ability to obtain and maintain a heading solution.

For a heading calculation, GPS, GLONASS, Galileo and BeiDou satellites are used interchangeably, as intersystem biases cancel inside the VR500—this translates into being able to work in more obstructed areas and maintain a GNSS heading solution.

Supplemental Sensors

Overview

The VR500 has an integrated gyro and two tilt sensors, which are enabled by default. Each supplemental sensor may be individually enabled or disabled. Both supplemental sensors are mounted on the printed circuit board inside the VR500.

The sensors act to reduce the RTK search volume, which improves heading startup and reacquisition times. This improves the reliability and accuracy of selecting the correct heading solution by eliminating other possible, erroneous solutions.

The [Hemisphere GNSS Technical Reference Manual](#) describes the commands and methodology required to recalibrate, query, or change the sensor status.

Tilt Aiding

The VR500's accelerometers (internal tilt sensors) are factory calibrated and enabled by default and constrains the RTK heading solution beyond the volume associated with a fixed antenna separation.

The VR500 knows the approximate inclination of the secondary antenna with respect to the primary antenna. The search space defined by the tilt sensor is reduced to a horizontal ring on the sphere's surface by reducing the search volume and decreases startup and reacquisition times (see Figure 3-2).

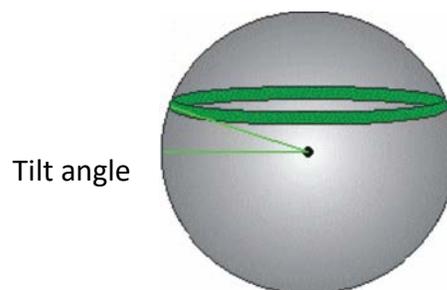


Figure 3-2: VR500 tilt aiding

Continued on next page

Supplemental Sensors, Continued

Gyro aiding

The VR500's internal gyro reduces the sensor volume for an RTK solution and shortens reacquisition times when a GNSS heading is lost due to blocked satellite signals.

The gyro provides a relative change in angle since the last computed heading, and, when used in conjunction with the tilt sensor, defines the search space as a wedge-shaped location (see Figure 3-3).

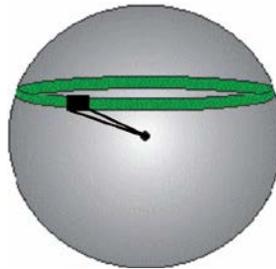


Figure 3-3: VR500 gyro aiding

The gyro aiding accurately smooths the heading output and the rate of turn, and provides an accurate substitute heading for a short period depending on the roll and pitch of the machine (ideally seeing the system through to reacquisition).

The gyro provides an alternate source of heading, accurate to within 1° per minute for up to three minutes, in times of GNSS loss for either antenna. If the outage lasts longer than three minutes, the gyro will have drifted too far and the VR500 begins outputting null fields in the heading output messages. There is no user control over the timeout period of the gyro.

The gyro initializes itself at power up and during initialization, or you can calibrate it as outlined in the [Hemisphere GNSS Technical Reference Manual](#).

For optimal performance, when the gyro is first initializing, the dynamics the gyro experiences during this warm-up period are similar to the regular operating dynamics.

Continued on next page

Supplemental Sensors, Continued

Gyro aiding,
continued

With the gyro enabled, it is used to update the post HTAU smoothed heading output from the moving base station RTK GNSS heading computation.

If the HTAU value is increased while gyro aiding is enabled, there will be little to no lag in heading output due to vehicle manoeuvres.

The [Hemisphere GNSS Technical Reference Manual](#) includes information on setting an appropriate HTAU value for the application.

Time Constants

Overview

The VR500 incorporates user-configurable time constants that can provide a degree of smoothing to the heading, pitch, Rate-of-Turn (ROT), Course-over-Ground (COG), and speed measurements.

You can adjust these parameters depending on the expected dynamics of the machine. For example, increasing the time is reasonable if the machine is very large and is not able to turn quickly or would not pitch quickly. The resulting values would have reduced “noise,” resulting in consistent values with time. If the machine is quick and nimble, increasing this value can create a lag in measurements.

Formulas for determining the level of smoothing are located in the [Hemisphere GNSS Technical Reference Manual](#). If you are unsure how to set this value, it is best to be conservative and leave it at the default setting.

Heading

Use the \$JATT,HTAU command to adjust the level of responsiveness of the true heading measurement provided in the \$GPHDT message. The default value of this constant is 0.1 seconds of smoothing when the gyro is enabled. The gyro is enabled by default but can be disabled.

By disabling the gyro, the equivalent default value of the heading time constant would be 0.5 seconds of smoothing. This is not automatic, and therefore it must be manually entered.

Increasing the time constant increases, the level of heading smoothing and increases lag.

Pitch

Use the \$JATT,PTAU command to adjust the level of responsiveness of the pitch measurement provided in the \$PSAT,HPR message. The default value of this constant is 0.5 seconds of smoothing.

Increasing the time constant increases the level of pitch smoothing and increases lag.

Continued on next page

Time Constants, Continued

**Rate-of-Turn
(ROT)**

Use the \$JATT,HRTAU command to adjust the level of responsiveness of the ROT measurement provided in the \$GPROT message. The default value of this constant is 2.0 seconds of smoothing.

Increasing the time constant increases the level of ROT smoothing.

Course-Over-Ground (COG)

Use the \$JATT,COGTAU command to adjust the level of responsiveness of the COG measurement provided in the \$GPVTG message. The default value of this constant is 0.0 seconds of smoothing.

Increasing the time constant increases the level of COG smoothing.

COG is computed using only the primary GNSS antenna and its accuracy depends upon the speed of the machine (noise is proportional to 1/speed).

This value is invalid when the machine is stationary.

Speed

Use the \$JATT,SPDTAU command to adjust the level of responsiveness of the speed measurement provided in the \$GPVTG message. The default value of this parameter is 0.0 seconds of smoothing.

Increasing the time constant increases the level of speed measurement smoothing.

Chapter 4: Operating the VR500

Overview

Introduction The chapter includes information about powering and configuring your VR500 receiver.

Contents

Topic	See Page
Powering the Receiver On/Off	52
LED Indicators	53
Configuring the VR500 Using the WebUI	54

Powering the Receiver On/Off

Power the receiver on/off

To power on the VR500, connect the ends of the VR500 power cable to a clean power source providing 9 to 32VDC, and hold the soft power switch until the screen illuminates.

The VR500 accepts an input voltage of 9 to 32 VDC via the power cable. The supplied power should be continuous and clean for best performance. Refer to Appendix B for the power specifications of the VR500.

⚠ WARNING:

Do not apply a voltage higher than 32 VDC. This will damage the receiver and void the warranty. Also, do not attempt to operate the VR500 with the fuse bypassed as this will void the warranty.

The VR500 features reverse polarity protection to prevent damage if the power leads are accidentally reversed. Although the VR500 proceeds through an internal startup sequence when you apply power, it will be ready to communicate immediately.

Initial startup may take 5 to 15 minutes depending on the location. Subsequent startups will output a valid position within 1 to 5 minutes depending on the location and time since the last startup.

The VR500 may take up to 5 minutes to receive a full ionospheric map from SBAS. Optimum accuracy is obtained once the VR500 is processing corrected positions using complete ionospheric information.

Note: Hemisphere GNSS recommends using a weather-tight connection and connector if the connection is located outside.

Electrical isolation

The VR500's power supply is isolated from the communication lines and the enclosure isolates the electronics mechanically from the machine (preventing machine hull electrolysis).

LED Indicators

Overview

The VR500 has four LED lights located bottom of the unit. Table 4-1 below describes each LED indicator.



Figure 4-1: VR500 LED

Table 4-1: LED indicators

Indicator	Description/Function
Power	Solid red light when receiver is powered on
GNSS	Solid amber light when the primary antenna is tracking four or more satellites
Heading	Indicates the Vector has calculated a heading value
UHF	Blinks each time an RTK message is received over UHF

Configuring the VR500 Using the WebUI

Overview


The VR500 is equipped with an onboard WebUI.

First, connect the Bluetooth/WiFi antenna to the connector. The receiver displays as an available Wi-Fi device in your available networks. Connect the tablet or PC to the VR500's WiFi.

To log in use the password: hgnss1234

Open a web browser window and type the following IP address:
192.168.100.1

The VR500 Main Menu displays.

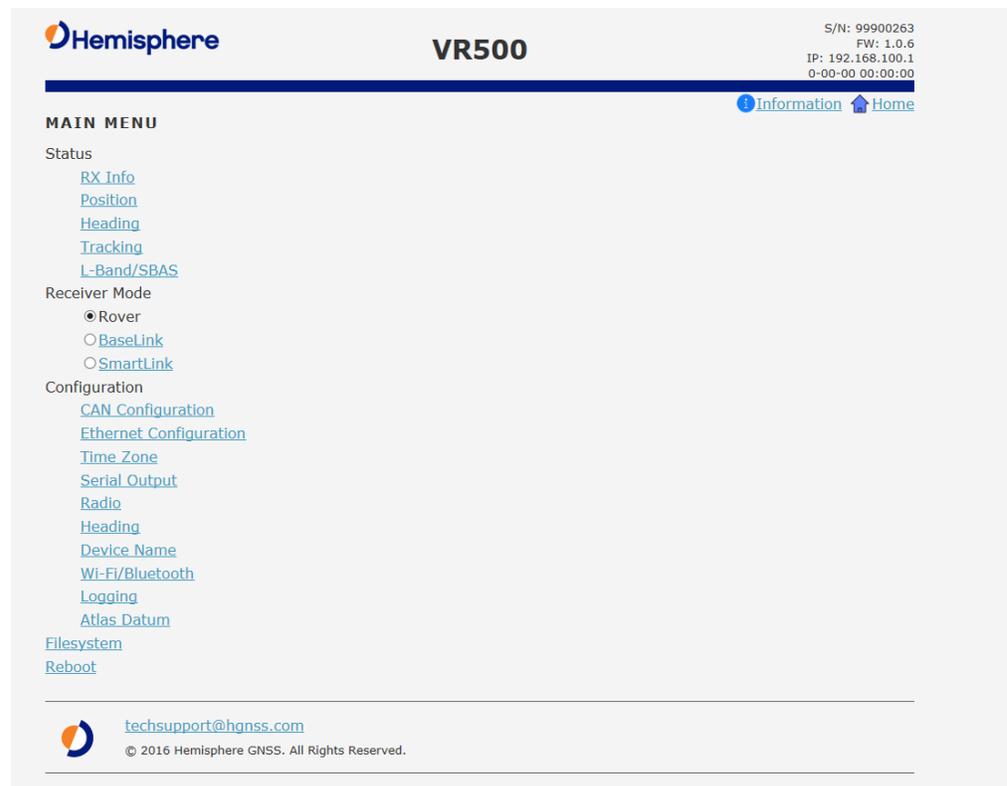

The screenshot shows the VR500 WebUI Main Menu. At the top left is the Hemisphere logo. At the top center is the text "VR500". At the top right, there is a status bar with the following information: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and 0-00-00 00:00:00. Below the status bar are two links: "Information" and "Home". The main menu is titled "MAIN MENU" and contains the following sections:

- Status
 - [RX Info](#)
 - [Position](#)
 - [Heading](#)
 - [Tracking](#)
 - [L-Band/SBAS](#)
- Receiver Mode
 - Rover
 - BaseLink
 - SmartLink
- Configuration
 - [CAN Configuration](#)
 - [Ethernet Configuration](#)
 - [Time Zone](#)
 - [Serial Output](#)
 - [Radio](#)
 - [Heading](#)
 - [Device Name](#)
 - [Wi-Fi/Bluetooth](#)
 - [Logging](#)
 - [Atlas Datum](#)
- [Filesystem](#)
- [Reboot](#)

At the bottom left is the Hemisphere logo and the email address techsupport@hgnss.com. At the bottom center is the copyright notice: © 2016 Hemisphere GNSS. All Rights Reserved.

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Status You can configure RX Info, Position, Heading, Tracking, L-band and SBAS.



Table 4-2: Status links

Link	Description
RX Info	Serial number of the board, firmware versions, and subscriptions
Position	Position, accuracy, HDOP, number of satellites used, and differential/RTK status
Heading	Heading, COG, the offset between heading and COG, ROT, yaw, pitch, roll, heave and speed
Tracking	Sky plot and SNRs of signals tracked
L-band/SBAS	Manually tune the antenna to track a specific L-band satellite or to set the receiver up to automatically select the correct SBAS satellite

Continued on next page


Configuring the VR500 Using the WebUI, Continued

RX info

The Serial Number, Board Type, Carrier Firmware (for both GNSS and carrier board), Carrier Uptime, WiFi MAC Address, and your Subscriptions are displayed.

Activated items have a green check mark.

Important: If you have purchased an activation or subscription, use the field at the bottom of the screen to type the Subscription Code, and click **Confirm**.

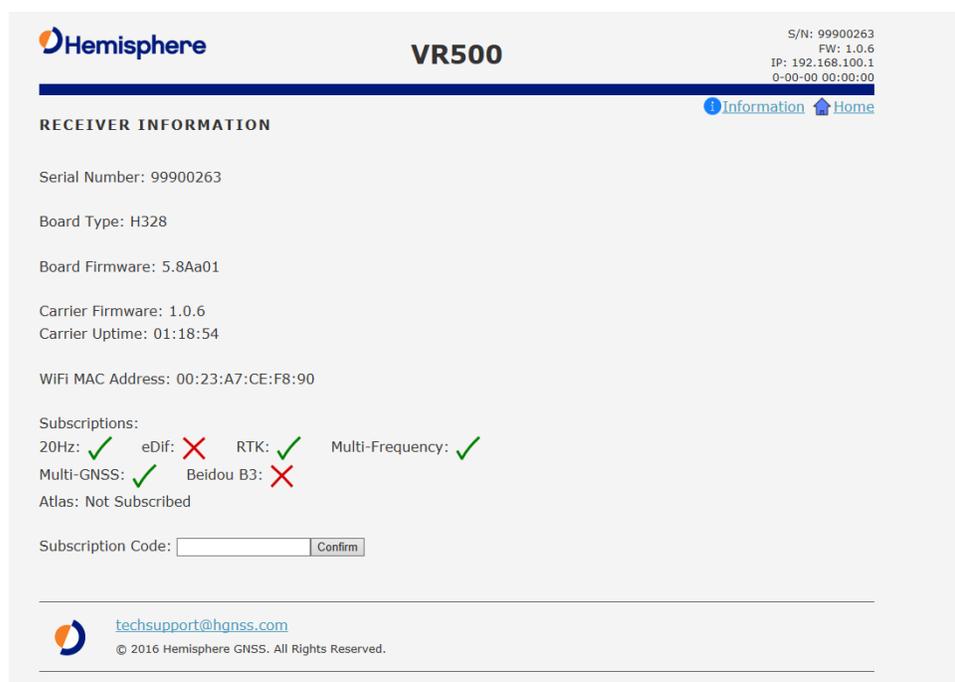

The screenshot shows the Hemisphere VR500 WebUI interface. At the top right, it displays device information: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and 0-00-00 00:00:00. Below this is a navigation bar with 'Information' and 'Home' links. The main section is titled 'RECEIVER INFORMATION' and lists the following details: Serial Number: 99900263, Board Type: H328, Board Firmware: 5.8Aa01, Carrier Firmware: 1.0.6, Carrier Uptime: 01:18:54, and WiFi MAC Address: 00:23:A7:CE:F8:90. A 'Subscriptions' section shows: 20Hz: ✓, eDif: ✗, RTK: ✓, Multi-Frequency: ✓, Multi-GNSS: ✓, Beidou B3: ✗, and Atlas: Not Subscribed. At the bottom, there is a 'Subscription Code' input field and a 'Confirm' button. The footer includes the email 'techsupport@hgns.com' and the copyright notice '© 2016 Hemisphere GNSS. All Rights Reserved.'

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Position

Position and time are displayed at the top of the screen. In the example below, the Time Zone is set to UTC-10, Honolulu time.

To change the Time Zone, go to the main page and click **Time Zone**. Please note this does not affect UTC time in NMEA output.

An estimate of your 3D (and 2D) position accuracy is given in both RMS and 2DRMS.


HDOP-Horizontal Dilution of Precision

Satellites Used-Number of satellites used

Solution Type-Fixed, Float, etc.

Differential Source-Atlas, RTK, etc.

Age of Differential-RTK latency

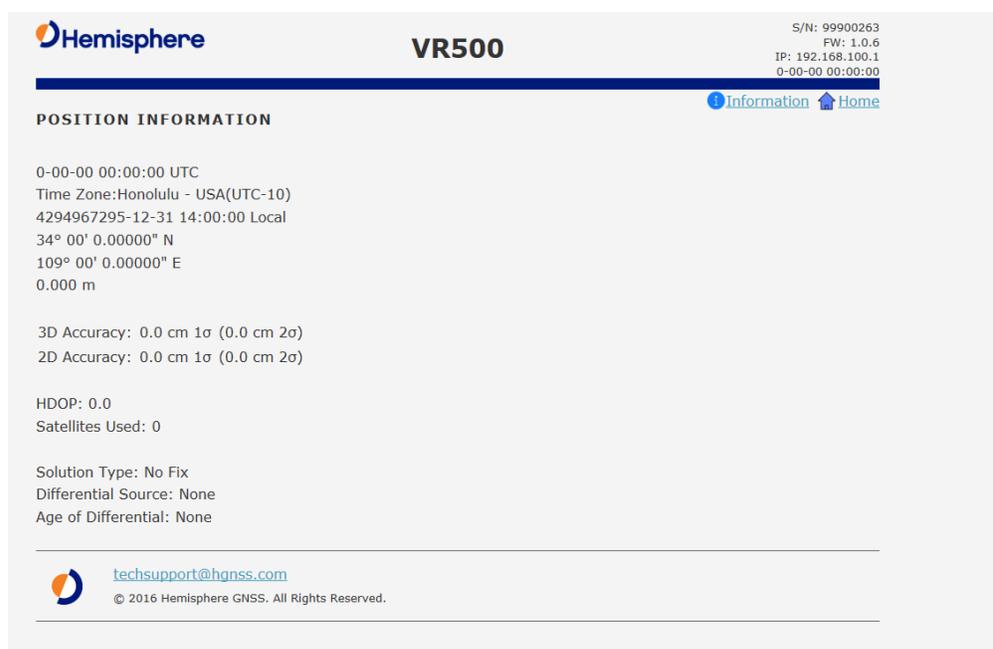

The screenshot displays the Hemisphere VR500 WebUI interface. At the top left is the Hemisphere logo, and at the top center is the device name "VR500". On the top right, technical details are listed: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and 0-00-00 00:00:00. Below this is a navigation bar with "Information" and "Home" links. The main content area is titled "POSITION INFORMATION" and contains the following data:

- 0-00-00 00:00:00 UTC
- Time Zone: Honolulu - USA(UTC-10)
- 4294967295-12-31 14:00:00 Local
- 34° 00' 0.00000" N
- 109° 00' 0.00000" E
- 0.000 m

- 3D Accuracy: 0.0 cm 1 σ (0.0 cm 2 σ)
- 2D Accuracy: 0.0 cm 1 σ (0.0 cm 2 σ)

- HDOP: 0.0
- Satellites Used: 0

- Solution Type: No Fix
- Differential Source: None
- Age of Differential: None

At the bottom left, there is a contact email "techsupport@hgns.com" and a copyright notice "© 2016 Hemisphere GNSS. All Rights Reserved."

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Heading

The **Heading Information** screen displays the following data:

Term	Definition
Compass rose	the difference between heading and COG
Heading	the direction of the vector created from the primary to secondary antenna. Heading is measured using true north
COG	the direction the machine is moving
YAW	the difference between COG and heading
Pitch	angle between the front and back of the machine
Roll	angle between the left and right side of the machine
Heave	the upward movement of the ground
Speed	speed of machine in km/h



Hemisphere **VR500** S/N: 99900263 FW: 1.0.6 IP: 192.168.100.1 0-00-00 00:00:00

[Information](#) [Home](#)

HEADING INFORMATION

Compass rose (hdg vs cog): 0.00°
 Heading: 0.00°
 COG: 0.00°
 ROT: 0.00°/min
 YAW: 0.00°
 Pitch: 0.00°
 Roll: 0.00°
 Heave: 0.00 m
 Speed: 0.00 km/h


techsupport@hgns.com
 © 2016 Hemisphere GNSS. All Rights Reserved.

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Tracking

The Sky Plot shows the azimuth and elevation of all tracked satellites.

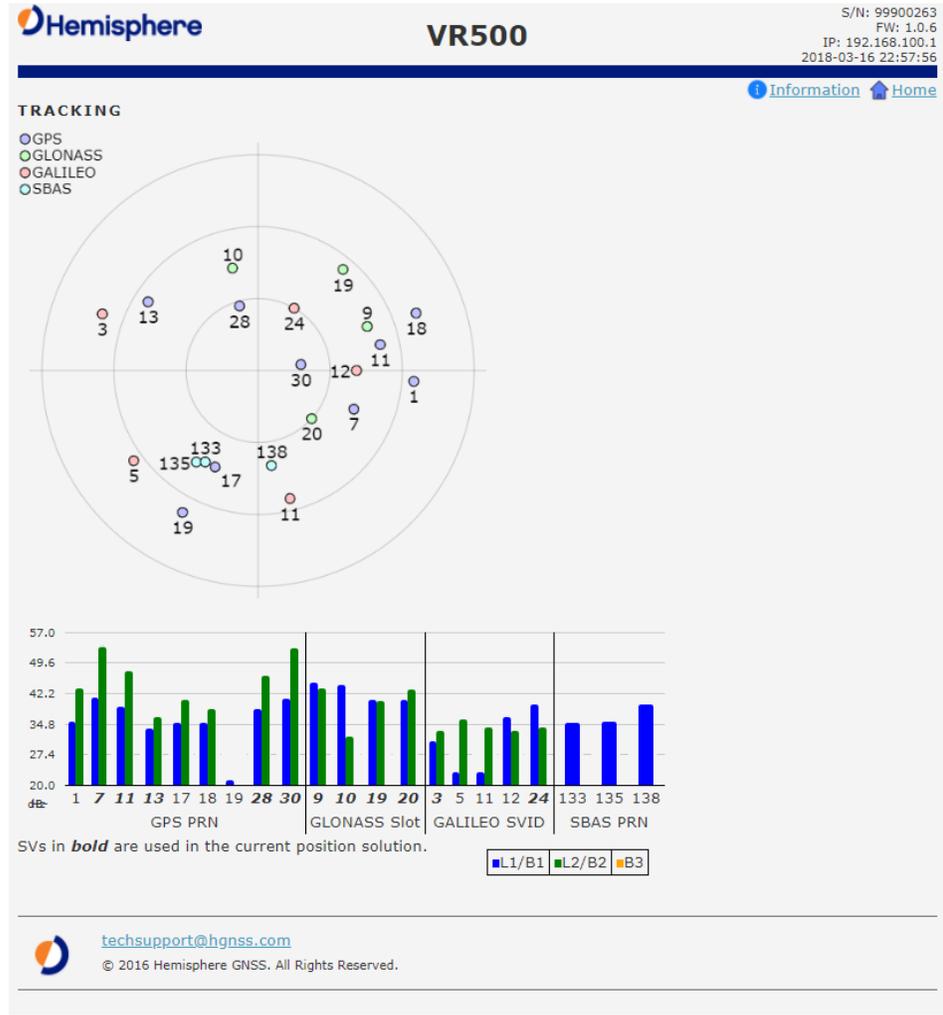

Continued on next page

Configuring the VR500 Using the WebUI, Continued

L-band/SBAS

You can manually configure the frequency and bandwidth of the L-band satellite you wish to track, or simply click the **Auto** button and let the receiver track automatically.



The screenshot shows the Hemisphere VR500 web interface. At the top right, it displays device information: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and a timestamp of 0-00-00 00:00:00. Below this is a navigation bar with 'Information' and 'Home' links. The main section is titled 'L-BAND/SBAS STATUS' and lists the following parameters: Frequency: 1539.8525 MHz, Source: Unknown, Bit Error Rate: 500 (Failed), Carrier Lock: No, Frame Sync 2: No, and Frame Sync: No. At the bottom of this section, there are input fields for '1539.8525' MHz and '600' bps, along with 'Set' and 'Auto' buttons. The footer includes the email 'techsupport@hgnss.com' and the copyright notice '© 2016 Hemisphere GNSS. All Rights Reserved.'

Receiver mode overview

Use the **Receiver Mode** menu to configure the VR500 as a standard GNSS receiver, or as a SmartLink receiver.



The screenshot shows a 'Receiver Mode' menu with three radio button options: 'Rover' (which is selected), 'BaseLink', and 'SmartLink'.

Table 4-3: Receiver mode

Link	Description
Rover	Configure the VR500 as a standard GNSS receiver
SmartLink	Uses Atlas as a correction source and outputs the correction over serial as a standard RTCM3 message

Configuring the VR500 Using the WebUI, Continued

Rover If you are using this as a Rover receiver, select **Rover Receiver Mode**. To use in the **SmartLink** receiver mode, select **Change Mode** and select the appropriate mode.

SmartLink SmartLink allows the VR500 to use Atlas as a correction source and then output the correction over serial as a standard RTCM 3 message.

Click the **SmartLink** hyperlink. Configure the RTCM3 format (such as MSM4) using the **Correction Output** dropdown menu.

Set the baud rate of the serial port that will output the correction. Set a target accuracy. Once the Atlas solution has converged to below this threshold, RTCM3 messages begin to output over the serial port.

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Configuration overview

You can configure the following using the VR500 WebUI:

- CANbus
- Ethernet
- Time zone
- Serial port baud rate and output
- Radio
- Heading constants
- Device name
- WiFi Bluetooth settings
- Logging options
- Data (used by Atlas corrections)

Configuration

[CAN Configuration](#)

[Ethernet Configuration](#)

[Time Zone](#)

[Serial Output](#)

[Radio](#)

[Heading](#)

[Device Name](#)

[Wi-Fi/Bluetooth](#)

[Logging](#)

[Atlas Datum](#)

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Radio

Use Radio to configure the internal UHF radio (protocol, frequency, etc.). The Radio Configuration defaults to a no-frequency setting.

Use the drop-down arrows to select pre-configured channels. Each channel has an associated frequency, and bandwidth.

Select a protocol (see Table 4-4 Radio Mode). The list of available protocols is dependent upon the bandwidth of your channel. For example, if the bandwidth of the channel you are using is 12.5KHz, Trimtalk 2 will not display.

To add new channels, obtain and load a .ucf file from your dealer using the **Upload Config File** button. Choose a channel and select the protocol. For Satel protocol, you may turn FEC OFF/ON.



The screenshot shows the Hemisphere VR500 WebUI interface. At the top, the Hemisphere logo and 'VR500' are displayed. On the right, system information is shown: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and 0-00-00 00:00:00. Below this, there are links for 'Information' and 'Home'. The main section is titled 'RADIO CONFIGURATION'. It includes a checkbox for 'Enabled' which is checked. Below that are fields for 'SN: 1709000251' and 'Version: V07.27.2.0.8.6'. The 'Channel' is set to 'channel 1' with a dropdown arrow, and a note indicates 'CH 1, TX 460.500000 MHz, RX 460.500000 MHz, 25.0 kHz, 1 W'. The 'Protocol' is set to 'PacCrest-GMSK' with a dropdown arrow. 'FEC' is set to 'OFF' with a dropdown arrow. 'Radio Power' is set to '100' with a dropdown arrow. There is an 'Upload Config File' section with a text input field, a 'Browse...' button, and an 'Upload' button. Below this is an 'Advanced UHF Settings' button. At the bottom of the configuration area are 'Save' and 'Undo' buttons. The footer contains the email 'techsupport@hgns.com' and the copyright notice '© 2016 Hemisphere GNSS. All Rights Reserved.'

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Radio,
continued

Use the following table to configure Radio settings. You may configure any settings in the blue boxes.


Table 4-4: Radio mode

Radio Mode	Link Rate	Spacing	Modulation	Scrambling	FEC
Trimtalk 1	4800 bps	12.5 kHz	GMSK	On	Off
Trimtalk 2	9600 bps	25 kHz			
PC1	9600 bps	25 kHz	GMSK	On	On
PC5	4800 bps	12.5 kHz			
PCC-4FSK	9600 bps	12.5 kHz	4FSK	On	On
	19200 bps	25 kHz			
Satel 3AS	9600 bps	12.5 kHz	4FSK	On	Off
	19200 bps	25 kHz			On
					Off
					On

Continued on next page


Configuring the VR500 Using the WebUI, Continued

CAN Turn ON/OFF CAN and select the baud rate (250 kbps or 500 kbps).

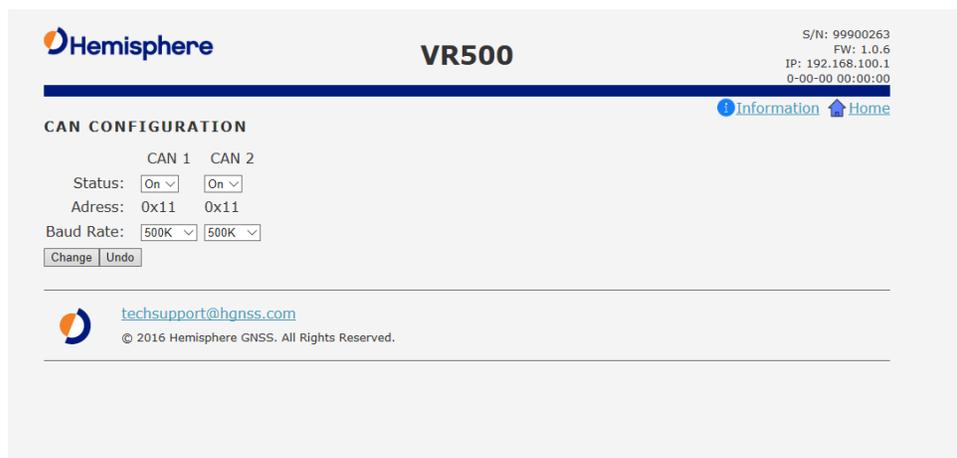

The screenshot shows the Hemisphere VR500 WebUI interface. At the top, the Hemisphere logo and 'VR500' are displayed. On the right, system information is shown: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and 0-00-00 00:00:00. Below this, there are links for 'Information' and 'Home'. The main section is titled 'CAN CONFIGURATION'. It features two columns for 'CAN 1' and 'CAN 2'. For each, there is a 'Status' dropdown menu (both set to 'On'), an 'Address' field (both set to '0x11'), and a 'Baud Rate' dropdown menu (both set to '500K'). Below these fields are 'Change' and 'Undo' buttons. At the bottom of the page, there is a contact email 'techsupport@hgns.com' and a copyright notice: '© 2016 Hemisphere GNSS. All Rights Reserved.'

Ethernet Use the VR500 WebUI to configure the Ethernet connection.

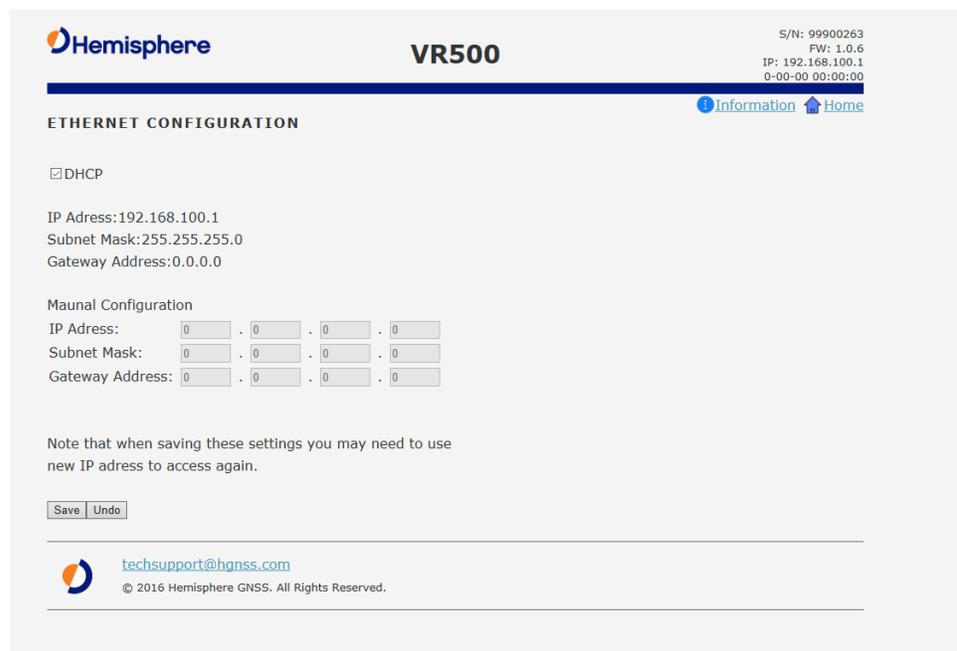

The screenshot shows the Hemisphere VR500 WebUI interface for Ethernet configuration. At the top, the Hemisphere logo and 'VR500' are displayed. On the right, system information is shown: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and 0-00-00 00:00:00. Below this, there are links for 'Information' and 'Home'. The main section is titled 'ETHERNET CONFIGURATION'. It features a checked checkbox for 'DHCP'. Below this, the current settings are displayed: IP Address: 192.168.100.1, Subnet Mask: 255.255.255.0, and Gateway Address: 0.0.0.0. There is a section for 'Manual Configuration' with input fields for IP Address, Subnet Mask, and Gateway Address, each with four individual digit boxes. Below this, a note states: 'Note that when saving these settings you may need to use new IP address to access again.' At the bottom of the page, there is a contact email 'techsupport@hgns.com' and a copyright notice: '© 2016 Hemisphere GNSS. All Rights Reserved.'


Continued on next page

Configuring the VR500 Using the WebUI, Continued

Serial Output Use Serial Output to configure the baud rate of each serial port (PortA and PortB) and turn off/on specific NMEA 0183 messages and proprietary Hemisphere BIN messages.

You can also change Port B from RS232 to RS422 and RS422 to RS232 reciprocally.

Configure the baud rates of the serial ports and click **Change**.

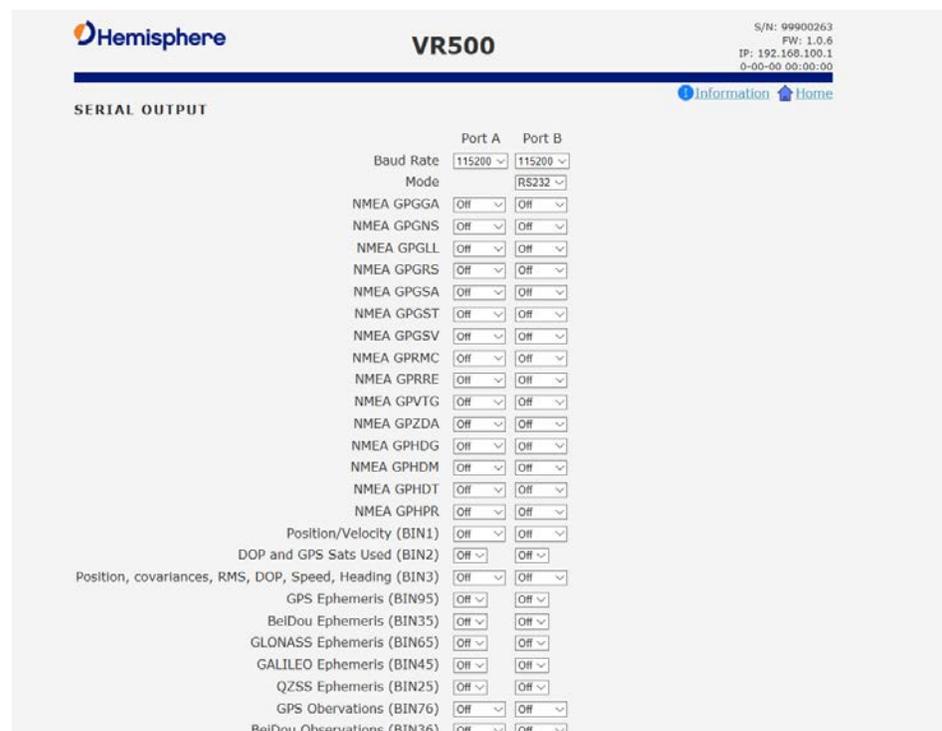

The screenshot shows the Hemisphere VR500 WebUI interface for the SERIAL OUTPUT configuration. The page includes the Hemisphere logo, the device name 'VR500', and system information (S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, 0-00-00 00:00:00). There are links for 'Information' and 'Home'. The configuration table is as follows:

	Port A	Port B
Baud Rate	115200	115200
Mode	RS232	RS232
NMEA GPGGA	Off	Off
NMEA GPGNS	Off	Off
NMEA GPGLL	Off	Off
NMEA GPRGS	Off	Off
NMEA GPGSA	Off	Off
NMEA GPGST	Off	Off
NMEA GPGSV	Off	Off
NMEA GPRMC	Off	Off
NMEA GPRRE	Off	Off
NMEA GPVTG	Off	Off
NMEA GPZDA	Off	Off
NMEA GPHDG	Off	Off
NMEA GPHDM	Off	Off
NMEA GPHDT	Off	Off
NMEA GPHPR	Off	Off
Position/Velocity (BIN1)	Off	Off
DOP and GPS Sats Used (BIN2)	Off	Off
Position, covariances, RMS, DOP, Speed, Heading (BIN3)	Off	Off
GPS Ephemeris (BIN95)	Off	Off
BeiDou Ephemeris (BIN35)	Off	Off
GLONASS Ephemeris (BIN65)	Off	Off
GALILEO Ephemeris (BIN45)	Off	Off
QZSS Ephemeris (BIN25)	Off	Off
GPS Observations (BIN76)	Off	Off
BeiDou Observations (BIN36)	Off	Off

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Serial Output, continued

NMEA GPHDM	Off	Off
NMEA GPHDT	Off	Off
NMEA GPHPR	Off	Off
Position/Velocity (BIN1)	Off	Off
DOP and GPS Sats Used (BIN2)	Off	Off
Position, covariances, RMS, DOP, Speed, Heading (BIN3)	Off	Off
GPS Ephemeris (BIN95)	Off	Off
BeiDou Ephemeris (BIN35)	Off	Off
GLONASS Ephemeris (BIN65)	Off	Off
GALILEO Ephemeris (BIN45)	Off	Off
QZSS Ephemeris (BIN25)	Off	Off
GPS Observations (BIN76)	Off	Off
BeiDou Observations (BIN36)	Off	Off
GLONASS Observations (BIN66)	Off	Off
GPS L1-Only Observations (BIN96)	Off	Off
GPS Almanac (BIN98)	Off	Off
BeiDou Almanac (BIN32)	Off	Off
GLONASS Almanac (BIN62)	Off	Off
GALILEO Almanac (BIN42)	Off	Off
QZSS Almanac (BIN22)	Off	Off
GPS Time Parameters (BIN94)	Off	Off
BeiDou Time Parameters (BIN34)	Off	Off
GALILEO Time Parameters (BIN44)	Off	Off
GPS Tracking Information (BIN100)	Off	Off
SBAS Tracking Information (BIN89)	Off	Off
GPS L1-Only Tracking Information (BIN99)	Off	Off
SBAS Corrections (BIN80)	Off	Off
Receiver Diagnostic Statistics (BIN97)	Off	Off
SBAS/L-Band Diagnostic Information (RD1)	Off	Off

Change | Undo

techsupport@hgns.com
© 2016 Hemisphere GNSS. All Rights Reserved.

Heading

Authorized users may change the Heading configuration.

Under the **Configuration** menu, click **Heading**. If you are an authorized user, type the Hemisphere GNSS provided password, and click **Login**.



VR500

S/N: 99900263
FW: 1.0.6
IP: 192.168.100.1
0-00-00 00:00:00

AUTHORITY CHECK

Please input password to continue:

Password:

techsupport@hgns.com
© 2016 Hemisphere GNSS. All Rights Reserved.

Continued on next page


Configuring the VR500 Using the WebUI, Continued

Heading,
continued

Note: Default settings can be changed to set the time constants to smooth heading, Course-over-Ground (COG), and speed measurements.

Various heading settings can also be configured.

Click the box of the desired setting and type the configuration setting values.

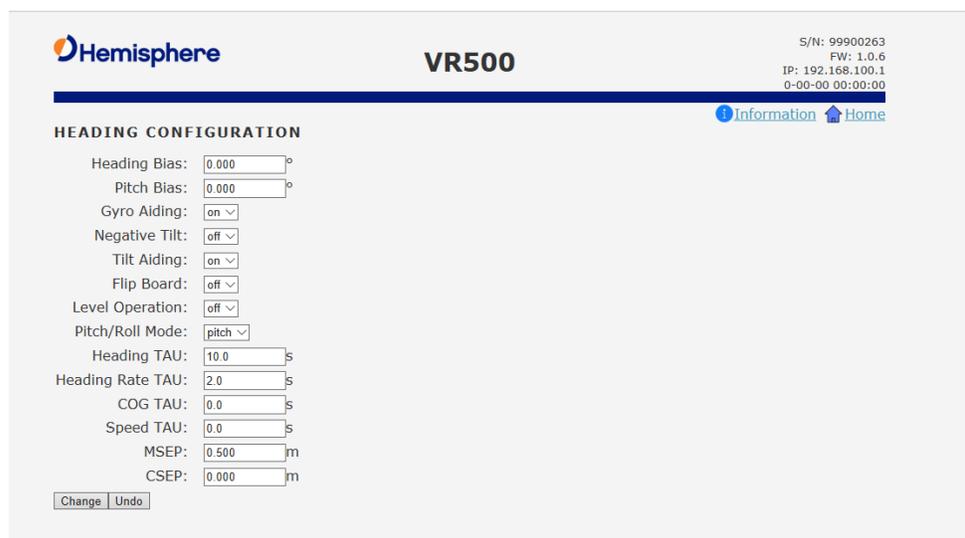

Hemisphere **VR500** S/N: 99900263 FW: 1.0.6
IP: 192.168.100.1 0-00-00 00:00:00
[Information](#) [Home](#)

HEADING CONFIGURATION

Heading Bias: °
Pitch Bias: °
Gyro Aiding: ▾
Negative Tilt: ▾
Tilt Aiding: ▾
Flip Board: ▾
Level Operation: ▾
Pitch/Roll Mode: ▾
Heading TAU: s
Heading Rate TAU: s
COG TAU: s
Speed TAU: s
MSEP: m
CSEP: m

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Heading,
continued

Table 4-5: Heading configurations

Time Constant	Description
Heading Bias	Add a bias to the heading value the receiver outputs. Range: -180 – +180
Pitch Bias	Add a bias to the pitch value the receiver outputs. If the receiver is in “roll” mode, this will add a bias to the roll instead. Range: -15 – +15
Gyro Aiding	Gyro aiding enables the use of the internal gyro sensor and allows for the continuous output of heading for up to three minutes during a GNSS outage. Gyro aiding improves the reacquisition time when GNSS heading is lost because of an obstruction in GNSS signal.
Negative Tilt	Change the sign of the pitch/roll measurement.
Tilt Aiding	Turn OFF or ON tilt aiding. When on, the sensors are used to reduce the RTK search volume – improving heading startup and reacquisition times.
Flip Board	N/A
Pitch/Roll Mode	If the antennas are mounted such that they model pitch, set to PITCH. If the antennas are mounted such that they model roll), set this to ROLL. Note: If your HBIAS is -90 or +90, this will be set to ROLL. If your HBIAS is 0 or 180, set this to PITCH.

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Heading,
continued

Table 4-5: Heading configurations (continued)

Time Constant	Description
HTAU (Heading)	<p>Adjust the responsiveness to true heading.</p> <p>If the machine is large and unable to turn quickly, increase this value.</p> <p>For longer baselines (10 m) HTAU should be between 0.1 and 0.5, since the gyro introduces noise.</p> <p>Default value: 0.1 s with gyro enabled Range: 0.0 to 60 s</p> <p>Formula: $htau (s) = 40 / \text{max rate of turn } (^\circ/s)$ <i>with gyro ON</i> $htau (s) = 10 / \text{max rate of turn } (^\circ/s)$ <i>with gyro OFF</i></p>
HRTAU (Rate of Turn)	<p>Adjust the responsiveness to the rate of heading change.</p> <p>If the machine is large and unable to turn quickly, increase this value.</p> <p>Default value: 2.0 s with gyro enabled Range: 0.0 to 60 s</p> <p>Formula: $hrtau (s) = 10 / \text{max rate of the rate of turn } (^\circ/s^2)$</p>

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Heading,
continued


Table 4-5: Heading configurations (continued)

Time Constant	Description
COGTAU (Course Over Ground)	<p>Adjust the responsiveness to the course over ground measurement.</p> <p>If the machine is small and dynamic, leave this value at 0.0 s to be conservative.</p> <p>If the machine is large and resistant to motion, increase this value.</p> <p>Default value: 0.0 s Range: 0.0 to 60 s Formula: cogtau (s) = 10 / max rate of change of course (°/sec)</p>
SPDTAU (Speed)	<p>Adjust the responsiveness to speed.</p> <p>If the machine is small and dynamic, leave this value at 0.0 s to be conservative.</p> <p>If the machine is large and resistant to motion, increase this value.</p> <p>Default value: 0.0 s Range: 0.0 to 60 s Formula: spdtau (s) = 10 / max acceleration (m/s²)</p>
CSEP	<p>This is the antenna separation calculated by the receiver. Ensure the CSEP value is within 0.2 of 0.5 (within two cm of 50 cm).</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Note: If CSEP value is “0” the receiver is unable to calculate the separation between the primary and secondary antennas.</p> </div>

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Device name Change the name of the receiver (displayed at the top of the WebUI).

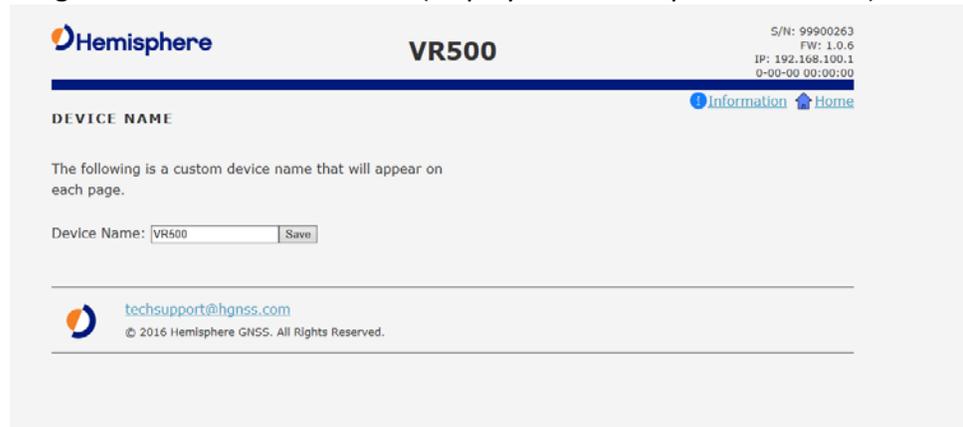

The screenshot shows the Hemisphere VR500 WebUI interface. At the top, the Hemisphere logo and 'VR500' are displayed. On the right, system information is shown: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and 0-00-00 00:00:00. Below this, there are links for 'Information' and 'Home'. The main section is titled 'DEVICE NAME' and contains the text: 'The following is a custom device name that will appear on each page.' Below this text is a form with 'Device Name: VR500' and a 'Save' button. At the bottom, there is a footer with the email 'techsupport@hgns.com' and the copyright notice '© 2016 Hemisphere GNSS. All Rights Reserved.'

Wi-Fi Bluetooth configuration Configure the WiFi access name, encryption mode, and encryption key of the VR500 in the WiFi/Bluetooth configuration settings. Click to enable Bluetooth options and type the PIN of the VR500.

Note: The VR500 internal filesystem cannot be accessed when Bluetooth is enabled. To access the internal filesystem, disable Bluetooth.



The screenshot shows the Hemisphere VR500 WebUI interface for 'WI-FI/BLUETOOTH CONFIGURATION'. At the top, the Hemisphere logo and 'VR500' are displayed. On the right, system information is shown: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and 0-00-00 00:00:00. Below this, there are links for 'Information' and 'Home'. The main section is titled 'WI-FI/BLUETOOTH CONFIGURATION' and contains two sub-sections: 'Wi-Fi Options' and 'Bluetooth Options'. Under 'Wi-Fi Options', there are fields for 'SSID' (vr500_99900263 (default)), 'Encryption Mode' (WPA2), and 'Encryption Key' (hgns1234). Under 'Bluetooth Options', there is a checkbox for 'Enabled' which is checked, and fields for 'Name' (vr500_99900263 (default)) and 'PIN' (1234). Below these fields is a note: 'Note that when saving these settings you may be disconnected from Wi-Fi.' At the bottom of the configuration section, there are 'Save' and 'Undo' buttons. At the very bottom, there is a footer with the email 'techsupport@hgns.com' and the copyright notice '© 2016 Hemisphere GNSS. All Rights Reserved.'

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Logging

Log data to the internal memory of the VR500 or download a previously saved log.



Table 4-6: Logging configuration

Field	Description
Enabled checkbox	Click to enable logging. Each time the VR500 is powered on, logging begins with the specified settings.
Filename	Choose a filename. All filenames automatically have an appended date and timestamp.
Start/Stop	Set a time to start and a time to stop logging.
Now/Forever	Select the logs to start logging now, or to log indefinitely (until shut off).

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Logging,
continued

Table 4-6: Logging configuration (continued)

Field	Description
File Splitting	<p>Automatically closes a file and restarts a new file after a period of time.</p> <p>Use file splitting to decrease file sizes or to prevent the loss of a file resulting in the loss of all data</p>
GGA	<p>Turn on GGA message logging at 0.2Hz, 1Hz, 10Hz, or 20HZ.</p> <div style="border: 1px solid black; padding: 5px;"> <p>Note: 10Hz and 20Hz are only available with activations (some kits may come with 10Hz or 20Hz included).</p> </div>
Position Velocity	<p>Log the position and velocity of the receiver at 0.2Hz, 1Hz, 10Hz, or 20HZ.</p> <div style="border: 1px solid black; padding: 5px;"> <p>Note: 10Hz and 20Hz are only available with activations (some kits may come with 10Hz or 20Hz included).</p> </div>
Observations*	<p>Log raw GNSS observations at 0.2Hz, 1Hz, 10Hz, or 20HZ.</p> <div style="border: 1px solid black; padding: 5px;"> <p>Note: 10Hz and 20Hz are only available with activations (some kits may come with 10Hz or 20Hz included).</p> </div> <p><small>*This feature is only available if you have a "Raw" activation on the receiver.</small></p>

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Logging,
continued

Table 4-6: Logging configuration (continued)

Field	Description
Ephemeris*	<p>Log raw GNSS ephemeris messages at 0.2Hz, 1Hz, 10Hz, or 20Hz.</p> <div style="border: 1px solid black; padding: 5px;"> <p>Note: 10Hz and 20Hz are only available with activations (some kits may come with 10Hz or 20Hz included).</p> </div> <p><small>*This feature is only available if you have a “Raw” activation on the receiver.</small></p>
Corrections	Log the correction messages coming into the receiver.
High Speed	<p>High Speed logs diagnostic data.</p> <div style="border: 1px solid black; padding: 5px;"> <p>Note: Selecting that dropdown option forces the GGA, “corrections” and “ephemeris” options on.</p> </div>
Heading	<p>Heading logs the following messages:</p> <ul style="list-style-type: none"> • GPHDT • GPHDM • GPHDG • HPR • BIN3

To stop logging, de-select the **Enabled** button and press **Save Settings**.


⚠ WARNING:
If you turn off the receiver without properly closing a log, the log file will become corrupted.

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Atlas Datum If using Atlas (**not RTK**), datum defaults to ITRF08.

You can change Datum Type to GDA94 or enter custom reference frame offsets.

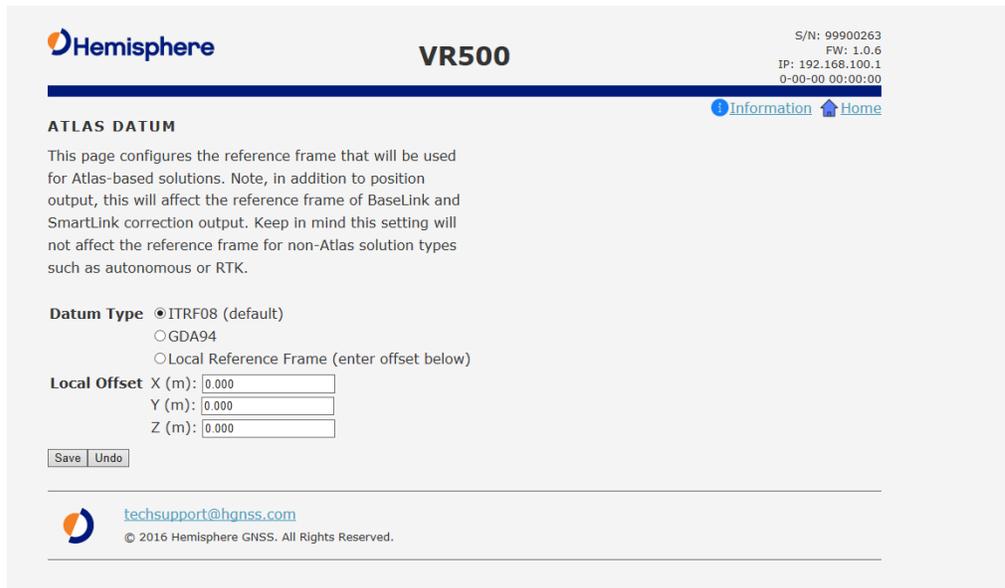

The screenshot shows the Hemisphere VR500 web interface. At the top, the Hemisphere logo and 'VR500' are displayed. On the right, device information is shown: S/N: 99900263, FW: 1.0.6, IP: 192.168.100.1, and 0-00-00 00:00:00. Below this, there are links for 'Information' and 'Home'. The main section is titled 'ATLAS DATUM' and contains the following text: 'This page configures the reference frame that will be used for Atlas-based solutions. Note, in addition to position output, this will affect the reference frame of BaseLink and SmartLink correction output. Keep in mind this setting will not affect the reference frame for non-Atlas solution types such as autonomous or RTK.' Below the text, there are radio buttons for 'Datum Type': 'ITRF08 (default)' (selected), 'GDA94', and 'Local Reference Frame (enter offset below)'. Under 'Local Reference Frame', there are three input fields for 'Local Offset': 'X (m): 0.000', 'Y (m): 0.000', and 'Z (m): 0.000'. At the bottom of the form, there are 'Save' and 'Undo' buttons. The footer includes the email 'techsupport@hgnss.com' and the copyright notice '© 2016 Hemisphere GNSS. All Rights Reserved.'

Filesystem The filesystem can be used to download log files that have been previously stored onto the VR500, or the filesystem can be used to upgrade both GNSS firmware or carrier board firmware.

Note: The filesystem cannot be used when Bluetooth is enabled. If Bluetooth is enabled, an option will be given to disable Bluetooth.

Continued on next page

Configuring the VR500 Using the WebUI, Continued

Filesystem, continued



After Bluetooth is disabled, the filesystem displays. Any log files stored on the receiver will be available for download.

To upgrade firmware, click **Choose File**, select the GNSS or carrier board firmware, and press "Upload."




Continued on next page

Configuring the VR500 Using the WebUI, Continued

Filesystem,
continued

After the file is uploaded, the list of files display.

Click **Load GNSS FW** or **Load Carrier FW**. When the FW is complete, click **Delete**.

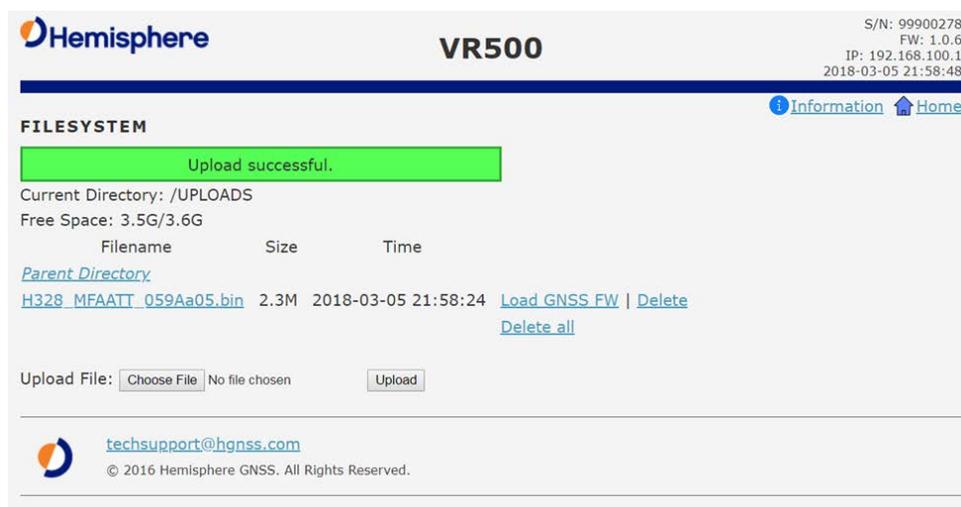

Hemisphere VR500 S/N: 99900278
FW: 1.0.6
IP: 192.168.100.1
2018-03-05 21:58:48

[Information](#) [Home](#)

FILESYSTEM

Upload successful.

Current Directory: /UPLOADS
Free Space: 3.5G/3.6G

Filename	Size	Time	
Parent Directory			
H328_MFAATT_059Aa05.bin	2.3M	2018-03-05 21:58:24	Load GNSS FW Delete
			Delete all

Upload File: No file chosen

techsupport@hgns.com
© 2016 Hemisphere GNSS. All Rights Reserved.

Reboot

Click **OK** to hard-boot the receiver.



Hemisphere VR500 S/N: 99900283
FW: 1.0.6
IP: 192.168.100.1
0-00-00 00:00:00

[Information](#) [Home](#)

MAIN MENU

Status

- [RX Info](#)
- [Position](#)
- [Heading](#)
- [Tracking](#)
- [L-Band/SBAS](#)

Receiver Mode

- Rover
- BaseLink
- SmartLink

Configuration

- [CAN Configuration](#)
- [Ethernet Configuration](#)
- [Time Zone](#)
- [Serial Output](#)
- [Radio](#)
- [Heading](#)
- [Device Name](#)
- [Wi-Fi/Bluetooth](#)
- [Logging](#)
- [Atlas Datum](#)
- [Filesystem](#)

This site says...
Are you sure you wish to reboot?

Appendix A: Troubleshooting

Overview

Introduction

Appendix A provides troubleshooting for common problems.

Contents

Topic	See Page
Troubleshooting	80

Troubleshooting

Appendix A troubleshooting

Table A-1: VR500 Troubleshooting

Symptom	Possible Solution
Receiver fails to power	<ul style="list-style-type: none"> • Check to see if the power LED is turned on • Verify polarity of power leads • Check integrity of power cable connectors • Check power input voltage (7 to 36 VDC) • Check the voltage from the connector at the end of the cable • Check current restrictions imposed by power source (minimum available should be > 1.0 A)
No data from VR500	<ul style="list-style-type: none"> • Check receiver power status to ensure the receiver is powered • Verify desired messages are activated (using PocketMax4, the WebUI, or \$JSHOW command in any terminal program) • Ensure the baud rate of the VR500 matches that of the receiving device • Check integrity and connectivity of power and data cable connections
Random data from VR500	<ul style="list-style-type: none"> • Verify that RTCM or binary messages are not being output (use the WebUI to see which messages are turned on) • Ensure the baud rate of the VR500 matches that of the remote device • Ensure the requested throughput does not exceed the amount of data allowed by the baud rate of the COM port
No GNSS lock	<ul style="list-style-type: none"> • Verify the VR500 has a clear view of the sky • Use PocketMax4 or the WebUI to see how many satellites are in view and the SNR values

Continued on next page

Troubleshooting, Continued

Appendix A troubleshooting , continued

Table A-1: VR500 Troubleshooting (continued)

Symptom	Possible Solution
No heading or incorrect heading value	<ul style="list-style-type: none"> • Check CSEP value is constant without varying more than 1 cm (0.39 in)—larger variations may indicate a high multipath environment and require moving the receiver location • \$JATT,SEARCH command forces the VR500 to acquire a new heading solution (unless gyro is enabled) • Enable GYROAID to provide heading for up to three minutes during GNSS signal loss • Enable TILTAID to reduce heading search times • Monitor the number of satellites and SNR values for both antennas within PocketMax—at least four satellites should have strong SNR values • The VR500 calculates heading from the primary to secondary GNSS antenna (the secondary antenna has an arrow underneath). Ensure via the WebUI or PocketMax4 there is not a heading bias added to the heading solution
VR500 will not go RTK fixed	<ul style="list-style-type: none"> • Check to see if the UHF indicator is blinking. If it is not blinking, check to see if the UHF base radio is transmitting data • Ensure the frequency and settings (modulation, protocol, channel spacing, forward error corrections, and scrambling) of the base radio match the VR500 radio • Check other VR500 receivers in the same area are going RTK Fixed. If they are not, the area may not have UHF coverage. Check if the VR500 works closer to the base radio. Installation of a repeater may be necessary • An external UHF radio antenna may be installed to improve UHF performance

Continued on next page

Troubleshooting, Continued

Appendix A troubleshooting , continued

Table A-1: VR500 Troubleshooting (continued)

Symptom	Possible Solution
VR500 will not go RTK fixed (continued)	<ul style="list-style-type: none"> • Check the RTK latency. If the VR500 is going RTK Float, but the latency keeps climbing, this usually indicates the radio settings are correct, but the environment is poor (or lacks adequate UHF coverage) <p>If the RTK latency is consistently 1, but the VR500 stays RTK Float, ensure the VR500 has an RTK activation</p>
Constellations	<ul style="list-style-type: none"> • If the VR500 is not using satellites from a specific constellation (such as Galileo or BeiDou), verify the base station supports those constellations. Only satellites used at the base station can be used at the rover • Check the WebUI for multi-GNSS activation
Atlas Corrections Are Not Working	<ul style="list-style-type: none"> • Check your subscription end-date in the WebUI • Use the L-band tab to check the frequency and bandwidth of the tracked satellite. We suggest pressing Auto to use your position to automatically tune to the correct frequency for your region

Appendix B: Technical Specifications

Technical Specifications

Introduction Appendix B provides the VR500 technical specifications and the VR500 certification information.

Contents

Topic	See Page
VR500 Technical Specifications	84
Index	90
TSP201852910420401_MapTitles	89
TSP201852910420501_MapTitles	90
End User License Agreement	91
Warranty Notice	95

VR500 Technical Specifications

VR500 sensor specifications

Table B-1: VR500 Sensor

Item	Specification
Receiver type	GPS, GLONASS, BeiDou, Galileo and RTK with carrier phase and L-band dual antenna
Channels	788
Satellites	12 L1CA GPS 12 L1P GPS 12 L2P GPS 12 L2C GPS 15 L5 GPS 12 G1 GLONASS 12 G2 GLONASS 12 G3 GLONASS 22 B1 BeiDou 22 B2 BeiDou 14 B3 BeiDou 12 Galileo E1 12 Galileo E5a 12 Galileo E5b 3 SBAS or 3 additional L1CA GPS 2 L-band
Primary antenna	GPS L1,L1P,L2C,L2P,L5 GLONASS G1,G2,Pcode BeiDou B1,B2,B3 Galileo E1,E5a,E5b L-band

Continued on next page

VR500 Technical Specifications, Continued

VR500 sensor specifications, continued

Table B-1: VR500 Sensor (continued)

Item	Specification		
Secondary antenna	GPS L1,L1P,L2C,L2P GLONASS G1,G2 BeiDou B1,B2 Galileo E1,E5b L-band		
GPS sensitivity	-142 dBm		
SBAS tracking	3-channel, parallel tracking		
Update rate	10 Hz standard, 20 Hz and 50 Hz available		
Horizontal accuracy		RMS (67%)	2DMRS (95%)
	RTK ^{1,2}	8 mm + 1 ppm	15 mm +2 ppm
	Atlas	0.04 m	0.08 m
	SBAS (WAAS) ¹	0.3 m	0.6 m
	Autonomous, no SA ¹	1.2 m	2.4 m
Heading accuracy	< 0.17° RMS @ 0.5 m antenna separation < 0.09° RMS @ 1.0 m antenna separation < 0.04° RMS @ 2.0 m antenna separation < 0.02° RMS @ 5.0 m antenna separation		
Pitch/roll accuracy	< 1° RMS		
Heave accuracy	30 cm ⁴		
ROT	145°/s maximum		
Timing (1PPS) accuracy	20 ns		
Cold start time	< 60 s typical (no almanac or RTC)		
Warm start time	< 30 s typical (almanac and RTC)		
Hot start time	< 10 s (almanac, RTC, and position)		
Maximum speed	1,850 km/h (999 kts)		

Continued on next page

VR500 Technical Specifications, Continued

VR500 sensor specifications, continued

Table B-1: VR500 Sensor (continued)

Item	Specification
Maximum altitude	18,288 m (60,000 ft)
Differential options	SBAS, Autonomous, External RTCM v2.3, RTK v3, L-band (Atlas), and DGPS
Antenna LNA gain input	10 to 40 dB

VR500 communication specifications

Table B-2: VR500 Communication

Item	Specification
Serial ports	3x full-duplex UART's 2x 3.3V CMOS 1x RS-232
CAN	2 CAN ports NMEA2000, ISO-11783
Baud rates	4800 - 115200
Data I/O protocol	NMEA 0183, CAN, Hemisphere GPS binary
Correction I/O protocol	Hemisphere GNSS' ROX, RTCM v2.3 (DGPS), RTCM v3 (RTK), CMR, CMR+3, and Atlas
Timing output	1 PPS CMOS, active high, rising edge sync, 10 k Ω , 10 pF load
Event marker input	CMOS, active low, falling edge sync, 10 k Ω 10 pF load
USB	1 USB Device, OTG with future firmware update
Ethernet	1x 10/100 base-T

VR500 power specifications

Table B-3: VR500 Power

Item	Specification
Input voltage	9-32 VDC
Power consumption	10.5W Maximum (All signals and L-band)
Current consumption	1.2A Maximum
Antenna voltage input	5 VDC Maximum
Antenna short circuit	Yes
Antenna input	50 Ω

Continued on next page

VR500 Technical Specifications, Continued

VR500 environmental specifications

Table B-4: VR500 Environmental

Item	Specification
Operating temperature	-40°C to +85°C (-40°F to +185°F)
Storage temperature	-40°C to +85°C (-40°F to +185°F)
Humidity	95% non-condensing (when installed in an enclosure)
Shock and vibration ⁴	Vibration: EP455 Section 5.15.1 Random Mechanical Shock: EP455 Section 5.14.1 Operational (when mounted in an enclosure with screw mounting holes utilized)
EMC ⁵	CE (ISO 14982 Emissions and Immunity) FCC Part 15, Subpart B CISPR22

VR500 mechanical specifications

Table B-5: VR500 Mechanical

Item	Specification
Dimensions	100 L x 60 W x 10 H mm (2.81 L x 1.60 W x 0.40 H in)
Weight	35-37 grams
Status indication	Power, GNSS lock, Differential lock, DGNSS position, Heading lock
Power/Data connector	24-pin (12x2) male header 0.078 in (2 mm) pitch 16-pin (8x2) male header 0.078 in (2 mm) pitch
Antenna connector	MMCX, female, straight

Continued on next page

VR500 Technical Specifications, Continued

VR500 L-band sensor specifications

Table B-6: VR500 L-band sensor

Item	Specification
Receiver type	Single Channel
Channels	1525 to 1560 MHz
Sensitivity	140 dBm
Channel spacing	5.0 kHz
Satellite selection	Manual and Automatic
Reacquisition time	15 seconds (typical)

VR500 aiding device specifications

Table B-7: VR aiding device

Device	Description
Gyro	Provides smooth heading, fast heading reacquisition, and reliable < 3° heading for periods up to 3 minutes when loss of GPS has occurred. ⁵
Tilt sensor	Provide pitch and roll data and assist in fast startup and reacquisition of heading solution.

¹ Depends on multi-path environment, number of satellites in view, satellite geometry, and ionospheric activity

² Depends also on baseline length

³ Receive only, does not transmit this format

⁴ When integrated in conjunction with the recommended shielding and protection as outlined in this guide

⁵ Under static conditions

Index

1PPS.....	6, 39
Activate Loader	17, 18
Activation	6
Age of Differential	57
Atlas	6, 11, 12, 40, 41, 44, 57, 61, 76, 86
Atlas Datum.....	76
Base Station	6
Baud Rates	35
BeiDou.....	6, 12, 45, 84, 85
Bluetooth	54, 62, 72, 76, 77
Configuration	62
Convergence time	11
course-over-ground	49, 68
Course-Over-Ground (COG)	50
CSEP.....	71
DGPS/DGNSS.....	6
Differential Corrections	6
Differential Source-	57
Electrical isolation	52
Elevation Mask.....	7
environmental.....	20, 21
Ephemeris	75
Ethernet	34, 62, 65, 86
File Splitting.....	74
firmware.....	14, 15, 16, 17, 18, 34, 55
Firmware	7, 14, 15, 16, 17, 18, 56
Flush-mount.....	25
GALILEO.....	7
GGA	74, 75
GLONASS	7, 10, 12, 45, 84, 85
GPS	6, 7, 8, 45, 84, 85, 86, 88
Gyro aiding	47, 48, 69
HDOP-	57
Heading .7, 10, 49, 53, 55, 58, 62, 67, 68, 69, 70, 71, 75, 85, 87	
HPR values	22
HTAU	48, 49, 70
LED indicators	53
Logging	62, 73, 74, 75
long site alignment.....	24
Message Types.....	35
Multipath	7
NMEA	7, 57, 66, 86
Now/Forever	73
Parallel orientation	21
Perpendicular orientation.....	21
Pitch	12, 49, 58, 69, 85
Pole-mount	25
Position	55
Position Velocity	74
Positioning accuracy	11
Positioning sustainability	11
Power/Data cable	29, 36, 37
Program Type	16
Radio	8, 63
Rate-of-Turn.....	49
Rate-of-Turn (ROT).....	49, 50
Reboot.....	78
Receiver mode	60
Receiver Mode	61
RightArm	14, 15, 16, 17, 18
Rover	61
ROX.....	8, 86
RS-422	34, 36
RTCM.....	8, 61, 80, 86
RTK	6, 8, 10, 11, 12, 33, 40, 41, 43, 46, 47, 48, 55, 57, 69, 76, 84, 86
RX Info	55
Satellites Used	57
SBAS .8, 12, 40, 41, 42, 52, 55, 60, 84, 85, 86	
Scalable service levels	11
Serial Output	66, 67
Serial port configuration	34
Serial ports	34, 86
Short site alignment.....	24
SmartLink	61
Solution Type-	57
SPDTAU	71
Speed	50, 58, 71, 75
Status	17, 55, 87
Subscription	6, 8, 56
Tilt Aiding	46, 69
UHF.....	6, 33, 53, 63, 81, 82
UHF Radio Antenna.....	33

WAAS 8, 85

WebUI 14, 36, 54, 72, 80

End User License Agreement

End User license agreement

IMPORTANT - This is an agreement (the "**Agreement**") between you, the end purchaser ("**Licensee**") and Hemisphere GNSS Inc. ("**Hemisphere**") which permits Licensee to use the Hemisphere software (the "**Software**") that accompanies this Agreement. This Software may be licensed on a standalone basis or may be embedded in a Product. Please read and ensure that you understand this Agreement before installing or using the Software Update or using a Product.

In this agreement any product that has Software embedded in it at the time of sale to the Licensee shall be referred to as a "**Product**". As well, in this Agreement, the use of a Product shall be deemed to be use of the Software which is embedded in the Product.

BY INSTALLING OR USING THE SOFTWARE UPDATE OR THE PRODUCT, LICENSEE THEREBY AGREES TO BE LEGALLY BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THESE TERMS, (I) DO NOT INSTALL OR USE THE SOFTWARE, AND (II) IF YOU ARE INSTALLING AN UPDATE TO THE SOFTWARE, DO NOT INSTALL THE UPDATE AND PROMPTLY DESTROY IT.

HEMISPHERE PROVIDES LIMITED WARRANTIES IN RELATION TO THE SOFTWARE. AS WELL, THOSE WHO USE THE EMBEDDED SOFTWARE DO SO AT THEIR OWN RISK. YOU SHOULD UNDERSTAND THE IMPORTANCE OF THESE AND OTHER LIMITATIONS SET OUT IN THIS AGREEMENT BEFORE INSTALLING OR USING THE SOFTWARE OR THE PRODUCT.

1. **LICENSE.** Hemisphere hereby grants to Licensee a non-transferable and non-exclusive license to use the Software as embedded in a Product and all Updates (collectively the "**Software**"), solely in binary executable form.
2. **RESTRICTIONS ON USE.** Licensee agrees that Licensee and its employees will not directly or indirectly, in any manner whatsoever:
 - a. install or use more copies of the Software than the number of copies that have been licensed;
 - b. use or install the Software in connection with any product other than the Product the Software was intended to be used or installed on as set out in the documentation that accompanies the Software.
 - c. copy any of the Software or any written materials for any purpose except as part of Licensee's normal backup processes;
 - d. modify or create derivative works based on the Software;
 - e. sub-license, rent, lease, loan or distribute the Software;
 - f. permit any third party to use the Software;
 - g. use or operate Product for the benefit of any third party in any type of service outsourcing, application service, provider service or service bureau capacity;
 - h. reverse engineer, decompile or disassemble the Software or otherwise reduce it to a human perceivable form;
 - i. Assign this Agreement or sell or otherwise transfer the Software to any other party except as part of the sale or transfer of the whole Product.
3. **UPDATES.** At Hemisphere's discretion Hemisphere may make Updates available to Licensee. An update ("**Update**") means any update to the Software that is made available to Licensee including error corrections, enhancements and other modifications. Licensee may access, download and install Updates during the Warranty Period only. All Updates that Licensee downloads, installs or uses shall be deemed to be Software and subject to this Agreement. Hemisphere reserves the right to modify the Product without any obligation to notify, supply or install any improvements or alterations to existing Software.
4. **SUPPORT.** Hemisphere may make available directly or through its authorized dealers telephone and email support for the Software. Contact Hemisphere to find the authorized dealer near you. As well, Hemisphere may make available user and technical documentation regarding the Software. Hemisphere reserves the right to reduce and limit access to such support at anytime.

Continued on next page

End User License Agreement, Continued

End User license agreement, continued

5. **BACKUPS AND RECOVERY.** Licensee shall back-up all data used, created or stored by the Software on a regular basis as necessary to enable proper recovery of the data and related systems and processes in the event of a malfunction in the Software or any loss or corruption of data caused by the Software. Licensee shall assume all risks of loss or damage for any failure to comply with the foregoing.
6. **OWNERSHIP.** Hemisphere and its suppliers own all rights, title and interest in and to the Software and related materials, including all intellectual property rights. The Software is licensed to Licensee, not sold.
7. **TRADEMARKS.** "Hemisphere GNSS", "Crescent", "Eclipse" and the associated logos are trademarks of Hemisphere. Other trademarks are the property of their respective owners. Licensee may not use any of these trademarks without the consent of their respective owners.
8. **LIMITED WARRANTY.** Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the "Warranty Period"), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free.
9. **WARRANTY EXCLUSIONS.** The warranty set forth in Section (8) will not apply to any deficiencies caused by (a) the Product not being used as described in the documentation supplied to Licensee, (b) the Software having been altered, modified or converted in any way by anyone other than Hemisphere approved by Hemisphere, (c) any malfunction of Licensee's equipment or other software, or (d) damage occurring in transit or due to any accident, abuse, misuse, improper installation, lightning (or other electrical discharge) or neglect other than that caused by Hemisphere. Hemisphere GNSS does not warrant or guarantee the precision or accuracy of positions obtained when using the Software (whether standalone or embedded in a Product). The Product and the Software is not intended and should not be used as the primary means of navigation or for use in safety of life applications. The potential positioning and navigation accuracy obtainable with the Software as stated in the Product or Software documentation serves to provide only an estimate of achievable accuracy based on specifications provided by the US Department of Defense for GPS positioning and DGPS service provider performance specifications, where applicable.
10. **WARRANTY DISCLAIMER.** EXCEPT AS EXPRESSLY SET OUT IN THIS AGREEMENT, HEMISPHERE MAKES NO REPRESENTATION, WARRANTY OR CONDITION OF ANY KIND TO LICENSEE, WHETHER VERBAL OR WRITTEN AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS OF ANY KIND INCLUDING FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, ACCURACY, RELIABILITY OR THAT THE USE OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS ARISING AS A RESULT OF CUSTOM, USAGE OR TRADE AND THOSE ARISING UNDER STATUTE.
11. **LIMITS ON WARRANTY DISCLAIMER.** Some jurisdictions do not allow the exclusion of implied warranties or conditions, so some of the above exclusions may not apply to Licensee. In that case, any implied warranties or conditions which would then otherwise arise will be limited in duration to ninety (90) days from the date of the license of the Software or the purchase of the Product. The warranties given herein give Licensee specific legal rights and Licensee may have other rights which may vary from jurisdiction to jurisdiction.
12. **CHANGE TO WARRANTY.** No employee or agent of Hemisphere is authorized to change the warranty provided or the limitation or disclaimer of warranty provisions. All such changes will only be effective if pursuant to a separate agreement signed by senior officers of the respective parties.

Continued on next page

End User License Agreement, Continued

End User license agreement, continued

13. **WARRANTY CLAIM.** In the event Licensee has a warranty claim Licensee must first check for and install all Updates that are made available. The warranty will not otherwise be honored. Proof of purchase may be required. Hemisphere does not honor claims asserted after the end of the Warranty Period.
14. **LICENSEE REMEDIES.** In all cases which involve a failure of the Software to conform in any material respect to the documentation during the Warranty Period or a breach of a warranty, Hemisphere's sole obligation and liability, and Licensee's sole and exclusive remedy, is for Hemisphere, at Hemisphere's option, to (a) repair the Software, (b) replace the Software with software conforming to the documentation, or (c) if Hemisphere is unable, on a reasonable commercial basis, to repair the Software or to replace the Software with conforming software within ninety (90) days, to terminate this Agreement and thereafter Licensee shall cease using the Software. Hemisphere will also issue a refund for the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.
15. **LIMITATION OF LIABILITY.** IN NO EVENT WILL HEMISPHERE BE LIABLE TO LICENSEE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES INCLUDING ARISING IN RELATION TO ANY LOSS OF DATA, INCOME, REVENUE, GOODWILL OR ANTICIPATED SAVINGS EVEN IF HEMISPHERE HAS BEEN INFORMED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. FURTHER, IN NO EVENT WILL HEMISPHERE'S TOTAL CUMULATIVE LIABILITY HEREUNDER, FROM ALL CAUSES OF ACTION OF ANY KIND, EXCEED THE TOTAL AMOUNT PAID BY LICENSEE TO HEMISPHERE TO PURCHASE THE PRODUCT. THIS LIMITATION AND EXCLUSION APPLIES IRRESPECTIVE OF THE CAUSE OF ACTION, INCLUDING BUT NOT LIMITED TO BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, BREACH OF WARRANTY, MISREPRESENTATION OR ANY OTHER LEGAL THEORY AND WILL SURVIVE A FUNDAMENTAL BREACH.
16. **LIMITS ON LIMITATION OF LIABILITY.** Some jurisdictions do not allow for the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to Licensee and Licensee may also have other legal rights which may vary from jurisdiction to jurisdiction.
17. **BASIS OF BARGAIN.** Licensee agrees and acknowledges that Hemisphere has set its prices and the parties have entered into this Agreement in reliance on the limited warranties, warranty disclaimers and limitations of liability set forth herein, that the same reflect an agreed-to allocation of risk between the parties (including the risk that a remedy may fail of its essential purpose and cause consequential loss), and that the same forms an essential basis of the bargain between the parties. Licensee agrees and acknowledges that Hemisphere would not have been able to sell the Product at the amount charged on an economic basis without such limitations.
18. **PROPRIETARY RIGHTS INDEMNITY.** Hemisphere shall indemnify, defend and hold harmless Licensee from and against any and all actions, claims, demands, proceedings, liabilities, direct damages, judgments, settlements, fines, penalties, costs and expenses, including royalties and attorneys' fees and related costs, in connection with or arising out of any actual infringement of any third party patent, copyright or other intellectual property right by the Software or by its use, in accordance with this Agreement and documentation, PROVIDED THAT: (a) Hemisphere has the right to assume full control over any action, claim, demand or proceeding, (b) Licensee shall promptly notify Hemisphere of any such action, claim, demand, or proceeding, and (c) Licensee shall give Hemisphere such reasonable assistance and tangible material as is reasonably available to Licensee for the defense of the action, claim, demand or proceeding. Licensee shall not settle or compromise any of same for which Hemisphere has agreed to assume responsibility without Hemisphere's prior written consent. Licensee may, at its sole cost and expense, retain separate counsel from the counsel utilized or retained by Hemisphere. 19. **INFRINGEMENT.** If use of the Software may be enjoined due to a claim of infringement by a third party then, at its sole discretion and expense, Hemisphere may do one of the following: (a) negotiate a license or other agreement so that the Product is no longer subject to such a potential claim, (b) modify the Product so that it becomes non-infringing, provided such modification can be accomplished without materially affecting the performance and functionality of the Product,

Continued on next page

End User License Agreement, Continued

End User license agreement, continued

- (c) replace the Software, or the Product, with non-infringing software, or product, of equal or better performance and quality, or (d) if none of the foregoing can be done on a commercially reasonable basis, terminate this license and Licensee shall stop using the Product and Hemisphere shall refund the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.
19. The foregoing sets out the entire liability of Hemisphere and the sole obligations of Hemisphere to Licensee in respect of any claim that the Software or its use infringes any third party rights.
20. **INDEMNIFICATION.** Except in relation to an infringement action, Licensee shall indemnify and hold Hemisphere harmless from any and all claims, damages, losses, liabilities, costs and expenses (including reasonable fees of lawyers and other professionals) arising out of or in connection with Licensee's use of the Product, whether direct or indirect, including without limiting the foregoing, loss of data, loss of profit or business interruption. **TERMINATION.** Licensee may terminate this Agreement at any time without cause. Hemisphere may terminate this Agreement on 30 days notice to Licensee if Licensee fails to materially comply with each provision of this Agreement unless such default is cured within the 30 days. Any such termination by a party shall be in addition to and without prejudice to such rights and remedies as may be available, including injunction and other equitable remedies. Upon receipt by Licensee of written notice of termination from Hemisphere or termination by Licensee, Licensee shall at the end of any notice period (a) cease using the Software; and (b) return to Hemisphere (or destroy and provide a certificate of a Senior Officer attesting to such destruction) the Software and all related material and any magnetic or optical media provided to Licensee. The provisions of Sections 6), 7), 8), 9), 10), 15), 21), 26) and 27) herein shall survive the expiration or termination of this Agreement for any reason.
21. **EXPORT RESTRICTIONS.** Licensee agrees that Licensee will comply with all export control legislation of Canada, the United States, Australia and any other applicable country's laws and regulations, whether under the Arms Export Control Act, the International Traffic in Arms Regulations, the Export Administration Regulations, the regulations of the United States Departments of Commerce, State, and Treasury, or otherwise as well as the export control legislation of all other countries.
22. **PRODUCT COMPONENTS.** The Product may contain third party components. Those third party components may be subject to additional terms and conditions. Licensee is required to agree to those terms and conditions in order to use the Product.
23. **FORCE MAJEURE EVENT.** Neither party will have the right to claim damages as a result of the other's inability to perform or any delay in performance due to unforeseeable circumstances beyond its reasonable control, such as labor disputes, strikes, lockouts, war, riot, insurrection, epidemic, Internet virus attack, Internet failure, supplier failure, act of God, or governmental action not the fault of the non-performing party.
24. **FORUM FOR DISPUTES.** The parties agree that the courts located in Calgary, Alberta, Canada and the courts of appeal there from will have exclusive jurisdiction to resolve any disputes between Licensee and Hemisphere concerning this Agreement or Licensee's use or inability to use the Software and the parties hereby irrevocably agree to attorn to the jurisdiction of those courts. Notwithstanding the foregoing, either party may apply to any court of competent jurisdiction for injunctive relief.
25. **APPLICABLE LAW.** This Agreement shall be governed by the laws of the Province of Alberta, Canada, exclusive of any of its choice of law and conflicts of law jurisprudence.
26. **CISG.** The United Nations Convention on Contracts for the International Sale of Goods will not apply to this Agreement or any transaction hereunder.

GENERAL. This is the entire agreement between Licensee and Hemisphere relating to the Product and Licensee's use of the same, and supersedes all prior, collateral or contemporaneous oral or written representations, warranties or agreements regarding the same. No amendment to or modification of this Agreement will be binding unless in writing and signed by duly authorized representatives of the parties. Any and all terms and conditions set out in any correspondence between the parties or set out in a purchase order which are different from or in addition to the terms and conditions set forth herein, shall have no application and no written notice of same shall be required. In the event that one or more of the provisions of this Agreement is found to be illegal or unenforceable, this Agreement shall not be rendered inoperative but the remaining provisions shall continue in full force and effect.

Warranty Notice

Warranty notice

COVERED PRODUCTS: This warranty covers all products manufactured by Hemisphere GNSS and purchased by the end purchaser (the "Products"), unless otherwise specifically and expressly agreed in writing by Hemisphere GNSS.

LIMITED WARRANTY: Hemisphere GNSS warrants solely to the end purchaser of the Products, subject to the exclusions and procedures set forth below, that the Products sold to such end purchaser and its internal components shall be free, under normal use and maintenance, from defects in materials, and workmanship and will substantially conform to Hemisphere GNSS's applicable specifications for the Product, for a period of 12 months from delivery of such Product to such end purchaser (the "Warranty Period"). Repairs and replacement components for the Products are warranted, subject to the exclusions and procedures set forth below, to be free, under normal use and maintenance, from defects in material and workmanship, and will substantially conform to Hemisphere GNSS's applicable specifications for the Product, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater.

EXCLUSION OF ALL OTHER WARRANTIES. The LIMITED WARRANTY shall apply only if the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GNSS relevant User's Manual and Specifications, AND the Product is not modified or misused. The Product is provided "AS IS" and the implied warranties of MERCHANTABILITY and FITNESS FOR A PARTICULAR PURPOSE and ALL OTHER WARRANTIES,

express, implied or arising by statute, by course of dealing or by trade usage, in connection with the design, sale, installation, service or use of any products or any component thereof, are EXCLUDED from this transaction and shall not apply to the Product. The LIMITED WARRANTY is IN LIEU OF any other warranty, express or implied, including but not limited to, any warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE, title, and non-infringement.

LIMITATION OF REMEDIES. The purchaser's EXCLUSIVE REMEDY against Hemisphere GNSS shall be, at Hemisphere GNSS's option, the repair or replacement of any defective Product or components thereof. The purchaser shall notify Hemisphere GNSS or a Hemisphere GNSS's approved service center immediately of any defect. Repairs shall be made through a Hemisphere GNSS approved service center only. Repair, modification or service of Hemisphere GNSS products by any party other than a Hemisphere GNSS approved service center shall render this warranty null and void. The remedy in this paragraph shall only be applied in the event that the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GNSS's relevant User's Manual and Specifications, AND the Product is not modified or misused. NO OTHER REMEDY (INCLUDING, BUT NOT LIMITED TO, SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR CONTINGENT DAMAGES FOR LOST PROFITS, LOST SALES, INJURY TO PERSON OR PROPERTY, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL LOSS) SHALL BE AVAILABLE

TO PURCHASER, even if Hemisphere GNSS has been advised of the possibility of such damages. Without limiting the foregoing, Hemisphere GNSS shall not be liable for any damages of any kind resulting from installation, use, quality, performance or accuracy of any Product.

HEMISPHERE IS NOT RESPONSIBLE FOR PURCHASER'S NEGLIGENCE OR UNAUTHORIZED USES OF THE PRODUCT. IN NO EVENT SHALL Hemisphere GNSS BE IN ANY WAY RESPONSIBLE FOR ANY DAMAGES RESULTING FROM PURCHASER'S OWN NEGLIGENCE, OR FROM OPERATION OF THE PRODUCT IN ANY WAY OTHER THAN AS SPECIFIED IN Hemisphere GNSS's RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GNSS is NOT RESPONSIBLE for defects or performance problems resulting from (1) misuse, abuse, improper installation, neglect of Product; (2) the utilization of the Product with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Hemisphere GNSS; (3) the operation of the Product under any specification other than, or in addition to, the specifications set forth in Hemisphere GNSS's relevant User's Manual and Specifications; (4) damage caused by accident or natural events, such as lightning (or other electrical discharge) or fresh/ salt water immersion of Product; (5) damage occurring in transit; (6) normal wear and tear; or (7) the operation or failure of operation of any satellite-based positioning system or differential correction service; or the availability or performance of any satellite-based positioning signal or differential correction signal.

THE PURCHASER IS RESPONSIBLE FOR OPERATING THE VEHICLE SAFELY. The purchaser is solely responsible for the safe operation of the vehicle used in connection with the Product, and for maintaining proper system control settings. UNSAFE DRIVING OR SYSTEM CONTROL SETTINGS CAN RESULT IN PROPERTY DAMAGE, INJURY, OR DEATH.

Continued on next page

Warranty Notice, Continued

Warranty notice, continued

The purchaser is solely responsible for his/her safety and for the safety of others. The purchaser is solely responsible for maintaining control of the automated steering system at all times. THE PURCHASER IS SOLELY RESPONSIBLE FOR ENSURING THE PRODUCT IS PROPERLY AND CORRECTLY INSTALLED, CONFIGURED, INTERFACED, MAINTAINED, STORED, AND OPERATED IN ACCORDANCE WITH Hemisphere GNSS's RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GNSS does not warrant or guarantee the positioning and navigation precision or accuracy obtained when using Products. Products are not intended for primary navigation or for use in safety of life applications. The potential accuracy of Products as stated in Hemisphere GNSS literature and/or Product specifications serves to provide only an estimate of achievable accuracy based on performance specifications provided by the satellite service operator (i.e. US Department of Defense in the case of GPS and differential correction service provider). Hemisphere GNSS reserves the right to modify Products without any obligation to notify, supply or install any improvements or alterations to existing Products.

GOVERNING LAW. This agreement and any disputes relating to, concerning or based upon the Product shall be governed by and interpreted in accordance with the laws of the State of Arizona.

OBTAINING WARRANTY SERVICE. In order to obtain warranty service, the end purchaser must bring the Product to a Hemisphere GNSS approved service center along with the end purchaser's proof of purchase. Hemisphere GNSS does not warrant claims asserted after the end of the warranty period. For any questions regarding warranty service or to obtain information regarding the location of any of Hemisphere GNSS approved service center, contact Hemisphere GNSS at the following address:

Hemisphere GNSS

8515 E. Anderson Drive Scottsdale, AZ 85255, USA

Phone: +1-480-348-6380

Fax: +1-480-270-5070

TECHSUPPORT@HREGNSS.COM WWW.HGNSS.COM



Hemisphere GNSS Inc.
8515 East Anderson Drive, Suite A
Scottsdale, Arizona, US 85255
Phone: 480-348-6380
Fax: 480-270-5070
PRECISION@HGNSS.COM
WWW.HGNSS.COM